



BX-35-ACA with RMS option

5 Amp average AC or True RMS

Measuring AC current directly from industry standard 5 Amp CTs, this meter is the OEM's choice for modern switchboard installation and upgrades.


3 1/2 Digit with 0.56" LEDs
in a 1/16 DIN Case

Compatibility


The BX-Series have a matching DIN case style that is complementary to the Leopard and Tiger family of meters. BX-Meters are the OEM's choice for switchboard and process indication. Each model is dedicated to a specific application and designed for quick and easy installation.




Typical Application Connections

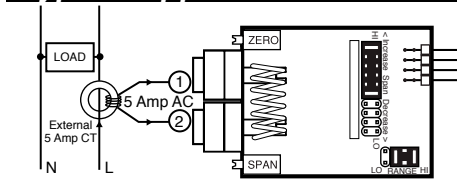


AC Current measurement in Single-phase Systems.
Easily User Scaled to Display Currents up to 1999 Amps.

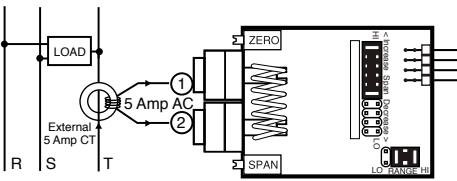

AC Current measurement in Multi-phase Systems.
Easily User Scaled to Display Currents up to 1999 Amps in 3 Phase 3 Wire and 3 Phase 4 Wire Systems.

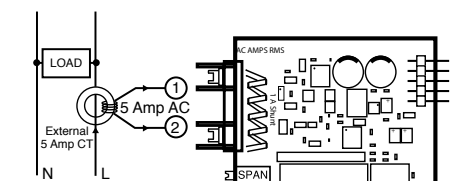

AC True RMS Current measurement in Single-phase Systems.
Easily User Scaled to Display Currents up to 1999 Amps.

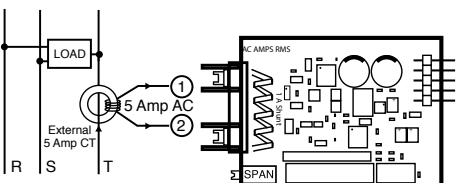

AC True RMS Current measurement in Multi-phase Systems.
Easily User Scaled to Display Currents up to 1999 Amps in 3 Phase 3 Wire and 3 Phase 4 Wire Systems.

General Features

The BX-35-ACA, a cost-effective, AC current measuring meter with a very low burden of 0.5VA respectively. Its internal shunt provides for direct connection to 5A CT's (current transformers). No matter what the CT ratio, the 15 turn, infinitely adjustable Span potentiometer enables the user to easily scale the output to display almost any current value required up to 1999A.

The BX-35-ACA meter can withstand momentary over loads of up to 200 Amps (40 times input signal) for one second without developing an open circuit. Our unique differential AC measurement circuit provides high impedance to ground on both sides of the shunt.

Specifications

- A/D Converter:**12 bit dual slope
- Accuracy:**±(0.05% of reading + 2 counts)
- Temp. Coeff.:**100 ppm/°C (Typical)
- Warm up time:**2 minutes
- Conversion Rate:**3 conversions per second (Typical)
- Display:**3 1/2 digit 0.56" Red LED display (std), 0.56" GREEN or Super Bright RED are optional. Range 0 to 1999 counts.
- Decimal Selection:**Header under face plate, X•X•X•X
- Positive Overrange:**1 (MSD) is displayed with all other digits blank.
- Power Supply:**AC/DC Auto sensing wide range supply
- PS1 (std)**85-265 VAC, 50-400Hz / 95-300 VDC @1.5W
- PS2**15-48 VAC, 50-400Hz / 10-72 VDC @4.0W
- Operating Temp.:**0 to 50 °C
- Storage Temp.:**-20 °C to 70 °C.
- Relative Humidity:**95% (non condensing)
- Case Dimensions:** 1/16 DIN Bezel: 96x24mm (3.78"x0.95")
Depth behind bezel 122.2 mm (4.83")
Plus 12.7mm (0.5") for Right-angled connector..
- Weight:**7 oz., 9 oz when packed.
- Certification:**UL Listed.


BX-Series, the OEMs choice for switchboard and process indication

- BX-35-ACA** AC amps, Scales RMS (True RMS Opt.). (5 Amp Internal Shunt), 3.5digit
- BX-35-ACV** AC volts, Scaled RMS (True RMS Opt.). 199.9/300V AC Header
.....Selectable Ranges, 3.5 digit
- BX-35-DCA** DC mV ±50mV, ±100mV, ±200mV Header Selectable Ranges, 3.5 digit
- BX-35-DCV** DC volts ±2V/±20V/±200V Header Selectable Ranges, 3.5 digit
- BX-35-CL** Process 4 to 20mA (100.0), easily user scalable, 3.5 digit w/Exc. opt
- BX-35-HZ** AC Line Frequency 15.0Hz to 199.9Hz. Up to 300V AC input, 3.5 digit
- BX-35-TC-KF or JF** K or J Thermocouple with °F, optional °C, 3.5 digit
- BX-35-RTD-F** 100Ω platinum RTD, 3 or 4 wire, °F in 1° resolution, optional °C, 3.5 digit
- BX-35-PRESSURE** Pressure, Load Cell 20mV/2mV/V, 5/10V Exc 4-wire 3.5 digit

- BX-45-ACA** AC amps, Scales RMS (True RMS Opt.). (5 Amp Internal Shunt), 4.5digit
- BX-45-ACV** AC volts, Scaled RMS (True RMS Opt.). 199.99/300.0V AC Header
.....Selectable Ranges, 4.5 digit
- BX-45-DCA** DC mV ±50mV, ±100mV, ±200mV Header Selectable Ranges, 4.5 digit
- BX-45-DCV** DC volts ±2V/±20V/±200V Header Selectable Ranges, 4.5 digit
- BX-45-CL** Process 4 to 20mA (100.00), easily user scalable, 4.5 digit w/Exc. opt
- BX-45-TC-KF** K Thermocouple with °F, optional °C, 4.5 digit
- BX-45-TC-JF** J Thermocouple with °F, optional °C, 4.5 digit
- BX-45-RTD-F** 100Ω platinum RTD, 3 or 4 wire, °F in 1° resolution, optional °C, 4.5 digit
- BX-45-PRESSURE** Pressure, Load Cell 20mV/2mV/V, 5/10V Exc 4-wire 4.5 digit

Connector Pinouts

This meter uses plug-in type screw terminal connectors for all connections.

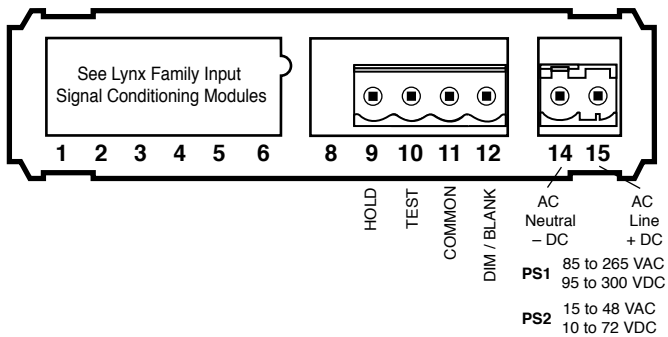

Pin Descriptions

Pins 1 & 2 - Input

Pin 9 - Hold: If this pin is left unconnected the meter will operate in a free running mode. When this pin is connected to the Common Pin 11, the meter display will be latched. A/D conversions will continue, but the display will not be updated until Pin 9 is disconnected from Pin 11.

Pin 10 - Display Test: When this pin is connected to the Common Pin 11, all segments of the display light up and 1888 is displayed. This is used to detect any missing segments in the display.


Pin 11 - Common: To Hold, Test or Dim the display, the respective pins have to be connected to this Common Pin.

Pin 12 - Dim/Blank: When this pin is connected to the Common Pin 11 the display is blanked out. If it is connected through an external 1K Ω pot, the display may be dimmed.

Pin 14 & 15 - AC/DC Power Input: These pins are the power pins of the meter and they only accept a special polarized screw terminal plug that can not be inserted into any other input socket. The standard meter has a auto sensing AC/DC power supply that operates from 85-265 VAC/95-300 VDC (PS1 Std). An optional isolated low voltage power supply that operates from 15-48 VAC/10-72 VDC (PS2) is also available.

Connectors

This meter uses plug-in type screw terminal connectors for all input and output connections. The power supply connections (pins 14 and 15) have a unique plug and socket outline to prevent cross connection. The main board uses standard right-angled connectors.


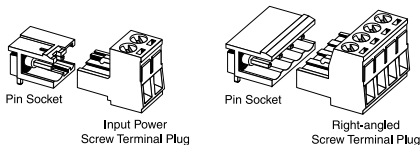


WARNING: AC and DC input signals and power supply voltages can be hazardous. Do Not connect live wires to screw terminal plugs, and do not insert, remove or handle screw terminal plugs with live wires connected.

Calibration Procedure


1. Apply an input of 0 amps AC to the meter by shorting the inputs.
2. Adjust the Zero Offset Pot until the meter reads 000.
3. Connect the secondary of the current transformer (CT) to the meter inputs, and apply a known current. For high current CTs, a known AC current, proportionate to the CT output, should be used for calibration.
4. Adjust the Span Pot until the meter displays the required reading for the current being applied.
5. The DX-35-ACA is now calibrated and ready for use.
(Whenever a new range is selected, re-calibration is required to meet the specified accuracy).

 Component Layout

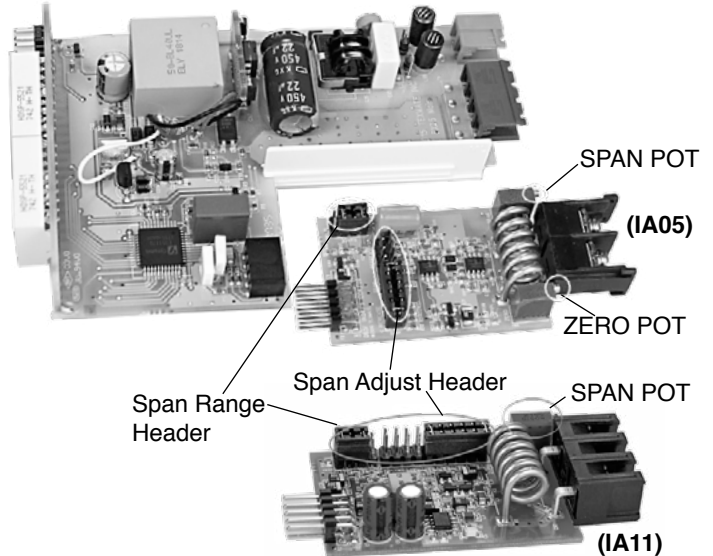


SPAN Adjust Header position	1	2	3	4	5	LO RANGE(0-1000)					HI RANGE(1000-1999)				
SPAN Pot %	10%	10%	10%	10%	10%	10%	10%	10%	10%	10%	10%	10%	10%	10%	10%
Signal Span %	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%					

Signal Conditioning Components

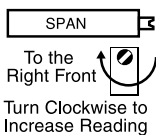

SPAN Potentiometer (Pot)


The 15 turn SPAN pot is always on the right side (as viewed from the back of the meter). Typical adjustment is 100% of the input signal range.

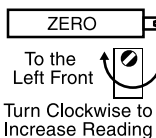

ZERO Potentiometer (Pot)

The ZERO pot is always to the left of the SPAN pot (as viewed from the back of the meter). Typically it enables the display reading to be offset ± 50 counts.

Opening Back Panel

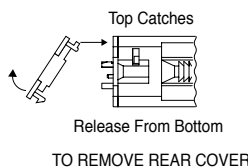

To open back panel, insert a flat screwdriver or similar instrument in both slots on the top of the case and pry open. The BX-Series meters slide out from the rear of the case as a complete assembly.

Ordering Information

Standard Options for this Model Number

Part Number	Description	List
► BASIC MODEL NUMBER Includes plug in type screw terminals, standard display and standard power supply unless optional versions are ordered.		
BX-35-ACA	AC amps, Scaled RMS. (5 Amp Internal shunt) IA05 .	
RMS OPTION	AC amps, True RMS. (5 Amp Internal shunt) IA11 . . .	
► DISPLAY		
DR . . .	Red LED, 0.56 inch high	
DB . . .	Super-bright Red LED, 0.56 inch high	
DG . . .	Green LED, 0.56 inch high	
► POWER SUPPLY		
PS1 . .	85-265VAC/95-300VDC	
PS2 . .	15-48VAC/10-72VDC	

Special Options and Accessories

Part Number	Description	List
► SPECIAL OPTIONS (Specify Inputs or Outputs & Req. Reading)		
ZR	Range Change from Standard Range shown in BOLD type	
ZS	Custom display scaling within standard ranges . . .	
► ACCESSORIES (Specify Serial # for Custom Artwork Installation)		
75-DBBZ96X24.	Black Bezel for 96x24mm Case.	
75-DMTC96X24	Side Slide Brackets (2 pc) - extra set, extra strength . . .	
ART-FS-S/D. . . .	NRC for artwork & set-up Faceplate/Desc.	
ART-FS1	Install Custom Faceplate per meter - 1 color	
93-PLUG2P-DP.	Extra Screw Terminal Conn., 2 Pin Power Plug . . .	
93-PLUG2P-DR	Extra Screw Terminal Conn., 2 Pin Plug.	
93-PLUG3P-DR	Extra Screw Terminal Conn., 3 Pin Plug.	
93-PLUG4P-DR	Extra Screw Terminal Conn., 4 Pin Plug.	
DN.CAS96X24L	Complete 96x24mm Case with bezel	
OP-MTLCLIP. . .	Screw Mounting Clips (2 pc) to screw tighten slide brackets .	
75-DTP96X24 . .	Black Metal Trim Plate (96x24mm Case) 1 Meter . . .	
75-DTP2X9624 .	Black Metal Trim Plate (96x24mm Case) 2 Meters . .	
75-DTP3X9624 .	Black Metal Trim Plate (96x24mm Case) 3 Meters . .	
OP-PMA/SWB-2	Switch Board Panel Mounting Adapter 2 Meters . .	
OP-PMA/SWB-2	Switch Board Panel Mounting Adapter 3 Meters . .	
75-DESCRIPTR.	Clear adhesive descriptors label for face plate . . .	

WARRANTY

Texmate warrants that its products are free from defects in material and workmanship under normal use and service for a period of one year from date of shipment. Texmate's obligations under this warranty are limited to replacement or repair, at its option, at its factory, of any of the products which shall, within the applicable period after shipment, be returned to Texmate's facility, transportation charges pre-paid, and which are, after examination, disclosed to the satisfaction of Texmate to be thus defective. The warranty shall not apply to any equipment which shall have been repaired or altered, except by Texmate, or which shall have been subjected to misuse, negligence, or accident. In no case shall Texmate's liability exceed the original purchase price. The aforementioned provisions do not extend the original warranty period of any product which has been either repaired or replaced by Texmate.

USER'S RESPONSIBILITY

We are pleased to offer suggestions on the use of our various products either by way of printed matter or through direct contact with our sales/application engineering staff. However, since we have no control over the use of our products once they are shipped, NO WARRANTY WHETHER OF MERCHANTABILITY, FITNESS FOR PURPOSE, OR OTHERWISE is made beyond the repair, replacement, or refund of purchase price at the sole discretion of Texmate. Users shall determine the suitability of the proDXct for the intended application before using, and the users assume all risk and liability whatsoever in connection therewith, regardless of any of our suggestions or statements as to application or construction. In no event shall Texmate's liability, in law or otherwise, be in excess of the purchase price of the product.

Texmate cannot assume responsibility for any circuitry described. No circuit patent or software licenses are implied. Texmate reserves the right to change circuitry, operating software, specifications, and prices without notice at any time.



1934 Kellogg Ave., Carlsbad, CA 92008
 Tel: 1-760-598-9899 • 1-800-TEXMATE
 Fax: 1-760-598-9828 • Email: orders@texmate.com

BX-35-ACA Technical Manual Copyright © 2018 Texmate Inc. All rights reserved. Published by: Texmate Inc. USA. Information in this Technical Manual is subject to change without notice due to correction or enhancement. The information described in this manual is proprietary to Texmate, Inc. and may not be copied, reproduced or transmitted, in whole or in part, in connection with the design, manufacture, or sale of apparatus, device or private label product without the express written consent of Texmate, Inc.