


YOKOGAWA 

# WT3000

Precision Power Analyzer

High-end Power Meter with top precision\*  
Basic Power Accuracy: 0.02% of reading

Precision Power Analyzer WT3000

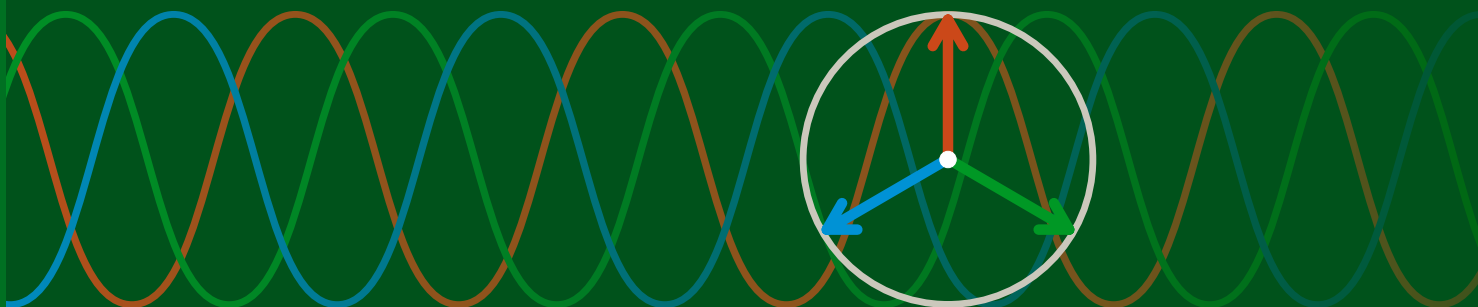

## New Options Available

- Store Function (Comes standard)
- USB Port for Peripherals (Optional)
- USB Port for connection to PC (Optional)
- Ethernet Communication Function (Optional)

Basic Power Accuracy

0.02% reading

Frequency Power Range

DC, 0.1 Hz to 1 MHz

Use as many as

4 input elements

\* Compared to previous Yokogawa model



(WT3000)

Bulletin 7603-00E

Yokogawa's power measurement technology provides best-in-class\*1 precision and stability

# Precision Power Analyzer WT3000

**Basic Power Accuracy: ±0.02%**

**With basic power accuracy of ± 0.02% of reading, DC and 0.1 Hz–1 MHz measurement bandwidths, and up to four input elements, the WT3000 provides higher-accuracy measurement for inverter I/O efficiency.**



## More Precise. More Bandwidth. More Features.\*2

- The WT3000 is a truly innovative measurement solution, combining top-level measurement accuracy with special functions.\*2
- The large, 8.4-inch liquid crystal display and the range indicator LEDs ensure good readability and make the system easy to use.

### The WT3000 is the answer to your measurement problems.

Have you had problems or questions such as these?

- When working with efficiency-improvement evaluation data for a high-efficiency motor, improvements cannot be seen unless measurements are taken with very high precision.
- Measurement efficiency is poor during power measurements and power supply quality measurements.

For answers to these questions, see page 6.

#### Features

- Standard feature
- Option
- Software (sold separately)

<input checked="" type="checkbox"/> Voltage range 15-1000V	<input checked="" type="checkbox"/> Current range 0.5-30A	<input checked="" type="checkbox"/> External sensor range 0.05-10V	<input checked="" type="checkbox"/> Frequency power range 1 MHz	<input checked="" type="checkbox"/> Inputs 4 input elements	<input checked="" type="checkbox"/> Basic Power Accuracy ±0.02%	<input checked="" type="checkbox"/> Crest factor 300(6)	<input checked="" type="checkbox"/> Display 8.4LCD	<input checked="" type="checkbox"/> Data updating interval As fast as 50 ms	<input checked="" type="checkbox"/> Delta calculation ΔT	<input checked="" type="checkbox"/> Harmonics /GS	<input checked="" type="checkbox"/> Frequency measurement 8ch /FQ	<input checked="" type="checkbox"/> Motor evaluation Speed Torque -MV
<input checked="" type="checkbox"/> PCcard	<input checked="" type="checkbox"/> Internal Memory 30MB	<input checked="" type="checkbox"/> USB memory /B5	<input checked="" type="checkbox"/> Printer /C5	<input checked="" type="checkbox"/> DAoutput /DA	<input checked="" type="checkbox"/> VGA /V1	<input checked="" type="checkbox"/> Comm GP4B	<input checked="" type="checkbox"/> Comm RS-232 Serial /C2	<input checked="" type="checkbox"/> Comm Ethernet /C7	<input checked="" type="checkbox"/> Comm USB /C12	<input checked="" type="checkbox"/> Software WTView2		

#### Better Efficiency in Power Measurements

In developing the WT3000, Yokogawa focused on improving efficiency in two basic areas. One goal was to obtain highly precise and simultaneous measurements of the power conversion efficiency of a piece of equipment. The other objective was to improve equipment evaluation efficiency by making simultaneous power evaluations and tests easier and faster.

#### New Innovations to Enhance the Reliable Measurement Technology Developed for the WT2000

The WT3000 is based on a measurement system which combines the measurement technology used in the WT2000 as well as other WT Series models. With the WT3000, we made further improvements to the basic performance specifications for even better functionality and reliability. We are confident users will appreciate these improvements to power and efficiency measurements thanks to the new power control technologies we have introduced.

#### A Variety of External Interface Choices

The WT3000 is the first model in the WT Series which is standard-equipped with a PC card slot (ATA flash card slot). The WT3000 is also standard-equipped with a GP-IB port. In addition, a serial (RS-232) port, Ethernet port, USB port for peripheral, and USB port for connection to PC are available as options. The variety of interface choices allows customers to use the best interfaces for a wide variety of equipment, media, and network environments.



#### Yokogawa's highest-precision power meter\*2

The WT3000 has the highest precision of the Yokogawa power meters in the WT Series. The models in the WT Series are designed to meet a wide variety of user needs. The WT200 Series is a high price-performance series which is very popular in production line applications. The WT1600 allows measurement data to be viewed in a variety of ways, including numerical value display, waveform display, and trend display capabilities.



## Select the model most suited to your measurement needs.

### Standard Version

#### ★High Accuracy and Wide Frequency Range

Basic Power Accuracy  
±(0.02% of reading + 0.04% of range)  
Frequency Range  
DC, 0.1 Hz to 1 MHz

#### ★Low Power Factor Error

Power factor influence when cosφ=0  
0.03% of S  
S is reading value of apparent power  
φ is phase angle between voltage and current

#### ★Current Range

Direct Input  
0.5/1/2/5/10/20/30 [A]

\* Models with input elements supporting current output type current sensors are planned for release.

#### External Input

50m/100m/200m/500m/1/2/5/10 [V] \*

#### ★Voltage Range

15/30/60/100/150/300/600/1000 [V] \*

\* Voltage range and current range are for crest factor 3

#### ★Continuous Maximum Common Mode Voltage (50/60 Hz)

1000 [Vrms]

#### ★Data Update rate: 50 ms to 20 sec

#### ★Effective input range: 1% to 130%

#### ★Simultaneous measurement with 2 Units

#### ★Standard PC Card Slot


#### ★Storage Function (Approximately 30MB internal memory)

### Motor Version

In addition to the functions of the standard version, the new models offer powerful motor/inverter evaluation functions.

#### ★Motor Efficiency and Total Efficiency Measurement

Analog or pulse signal from rotating sensor and torque meter can be input, and allows calculation of torque, revolution speed, mechanical power, synchronous speed, slip, motor efficiency, and total efficiency in a single unit.

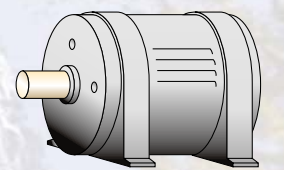

\*1 As of June 2005, for power accuracy in a three-phase power meter (as investigated by Yokogawa)

\*2 As compared to Yokogawa's WT2000

## FUNCTIONS

### ▶ WT3000 Controls: Simple to Use, Easy to View

The WT3000 was designed with user-friendly functions and controls in response to user requests for a simpler range setting operation and more user-friendly parameter setting display process.



#### Simpler range settings

##### Range settings using direct key input


The range indicator on the WT3000 is a seven-segment green LED, so the set range can be monitored at all times. The range can easily be switched using the up and down arrows.



#### Item pages make it easy to set the data you want to view for each experiment

##### Using item pages to set display preferences

The WT3000 has nine numeric item pages for displaying measurement values. Once you set the measurement parameters you want displayed on a particular item page, you can easily switch between entire groups of displayed parameters.

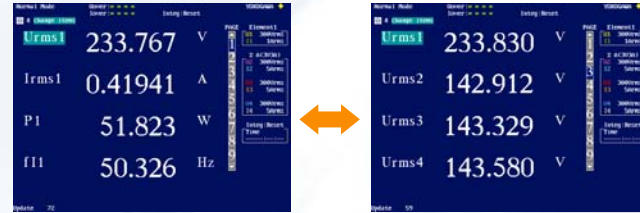

Easily switch between multiple item pages

### ▶ A wide range of standard functions

#### Formats for viewing waveforms as well as numerical values


##### A Variety of display formats

The WT3000 lets you display input signal waveforms in addition to numerical value data. This means you don't need to connect a special waveform analyzer just to check signal waveforms.<sup>1</sup>

In addition, the optional harmonics measurement function lets you display vectors and bar graphs for enhanced visual presentation.

<sup>1</sup> Waveforms up to approximately 10 kHz can be displayed accurately.

<sup>2</sup> Requires the optional harmonics measurement function (/G5). Excludes single phase model.

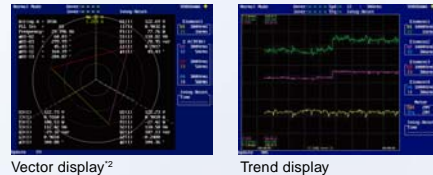

Vector display<sup>2</sup>

Trend display

#### High-speed measurement to capture rapid data fluctuations

##### 50ms data updating intervals

Fast updating allows you to precisely capture rapidly changing transient states in the measurement subject.

\* The WT3000 switches between two different calculation systems depending on the data updating interval. See page 15 for details.

#### Compensates for the loss

##### Compensation functions

This function compensates for the loss caused by the wiring of each element. The WT3000 has the following three types of correction functions to measure the power and efficiency.

###### • Wiring Compensation

This function compensates for the loss caused by the wiring of each element.

###### • Efficiency Compensation

The power measurement on the secondary side of a power transformer such as an inverter includes loss caused by the measurement instrument. This loss appears as error in the efficiency computation. This function compensates for this loss.

###### • Compensation for the Two-Wattmeter Method

In the two-power wattmeter method, an error results when current flows through the neutral line. This function computes the currents that flows through the neutral line for measurements using the two-wattmeter method with a three-phase, three wire (3V3A) system and adds the compensation value to the measured power.

#### Storing measurement data

##### Store Function

Voltage, current, power, and other measured data can be stored to the unit's approximately thirty megabytes of internal memory. These data can be saved in binary or ASCII format on a PC card or USB memory \*. \*requires the /C5 option

## OPTIONS


### ▶ A wide variety of optional functions make it easy to perform sophisticated power evaluations.

When you purchase a WT3000 from Yokogawa, you get to select just the options you need. This approach lets you maximize performance at a lower cost.

#### Checking phase voltage when you measure line voltage

##### Delta Calculation (/DT)

This function allows you to calculate individual phase voltages from the line voltage measured in a three-phase, three-wire (3V3A) system. R-S line voltage can be calculated in systems measured from a three-phase, three-wire method (using two elements). This is useful when you want to determine the phase voltage in motors and other items under test with no neutral lines.

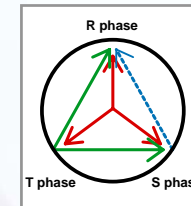

#### Checking harmonic components when a waveform is distorted

##### Harmonic Measurement Function (/G5)

Representing an improvement over our previous models, the WT3000 is able to measure normal and harmonic measurement data simultaneously. With the WT3000, you can measure distortion factor (THD) and simultaneously monitor total voltage, current, and distortion factor without altering the measuring modes. Also, you can calculate phase angle of three phase power between phases or across input elements.

\* For harmonic measurements in compliance with IEC61000-3-2, Option/G6 is required.


#### Checking the frequencies of all inputs

##### Added Frequency Measurement (/FQ)

In addition to the standard two channels of frequency measurement, a six-channel frequency measurement option is also available. This option provides frequency measurement of voltage and current on all eight channels (with input elements 1 through 4 installed). This is necessary when you want to measure voltage and current frequency from the instrument's I/O as well as voltage and current frequencies of multiple items under test at the same time.

##### Ethernet port (/C7)

The optional Ethernet port (100BASE-TX/10BASE-T) allows you to connect the WT3000 to a LAN. Once connected, images and numerical value data saved on the WT3000 can be transferred to a PC using FTP server software or other utilities.

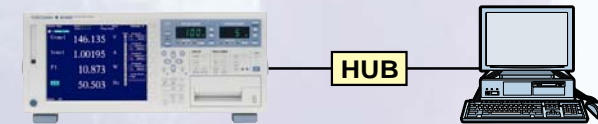

##### USB Port (PC) Option (/C12) \* Select USBport (PC) or RS-232

The USB port (type B connector) on the rear panel of the WT3000 allows data communications with a PC<sup>1</sup>.

1. USB driver required for USB communications. A USB driver will be available from our Web site.

##### USB Port (Peripheral) Option (/C5)

Using the USB port (peripheral with type A connector) on the front panel of the WT3000, you can save voltage, current, power, and other kinds of data that are stored in the WT3000 to a USB Memory. The data can be saved in binary or ASCII format. You can also connect a keyboard for easy input of user-defined math expressions.

#### Outputting measurement values as analog signals

##### D/A Output (/DA)

###### • 20 Channels

Measured values and calculated value by user-defined function can be output as  $\pm 5V$  FS DC voltages from the D/A output connector on the rear panel.

###### • D/A zoom

This function allows the any input signal range to be scaled to between  $-5V$  and  $5V^*$  in the D/A output as Upper and Lower ranges. This makes it possible to enlarge input signal fluctuations for observation using a recorder or logger.

\* The range is 0V to 5V for some functions, such as frequency measurement.

#### Output graphics at the touch of a button

##### Built-in printer (/B5)

The optional built-in printer is installed on the front side of the WT3000, so it is easy to use even if the WT3000 is mounted on a rack. The printer can be used to print data and waveform memos.



#### Video output for viewing on a larger screen

##### VGA output (/V1)

The VGA port can be used to connect an external monitor in order to view numerical value data and waveforms on a larger screen. This capability is useful if you want to simultaneously check large amounts of data on a separate screen, or view data in a separate location.

##### Serial (RS-232) (/C2) \* Select USBport (PC) or RS-232

### ▶ Future Release Plans

##### Advanced calculation functions (/G6)

These functions can perform IEC harmonic measurements, MATH calculations, FFT calculations, and waveform data capturing function.

###### • IEC harmonic measurement function

This function enables harmonic measurements in compliance with IEC61000-3-2. In addition, it can measure up to 50 orders of harmonics on signals from the fundamental wave frequency up to 1 kHz (or up to 20 orders in the range of 1 kHz to 2.5 kHz). This function is useful for measuring the harmonics of equipment in which the fundamental frequency changes to harmonics.

###### • MATH calculation function

This function can be used to create formulas combining measurement parameters on each channel, and then display the waveforms calculated using the formulas.

###### • FFT function

This function can be used to calculate and display power spectra for the voltage, current, power, and other parameters of each input element.

###### • Waveform data capturing function

This function can be used to externally output all sampled voltage and current data.

##### Cycle by Cycle function (/CC)

This function collects data such as voltage, current, power for each input cycle in an AC cycle, then saves the data as a list.

##### Flicker measurement (/FL)

This function enables measurement of voltage fluctuations/flicker in compliance with EN61000-3-3 (Ed1:1995).


Note: The descriptions and specifications may change.

## APPLICATIONS

### ► Measurement Applications to Utilize WT3000's Capabilities

#### Measurement of Inverter Efficiency

- Measuring Efficiency with High Precision: Simultaneous Measurement of Input and Output**  
 The WT3000 offers up to four input elements capable of simultaneous measurement of single-phase input/three-phase output, or three-phase input/three-phase output.
- Accurate Measurement of Fundamental PWM Voltage Waveforms**  
 Motor drive technology has become more complex in recent years; pure sine-wave-modulated PWM is less common, and cases in which the voltage mean differs greatly from the fundamental voltage waveform arise frequently. With the optional harmonic measurement function of the WT3000, accurate measurements of commonly measured values such as active power and the fundamental or harmonic components can be taken simultaneously without changing measuring modes.
- Phase Voltage Measurement without a Neutral Line**  
 With the delta computation function (/DT option), an object under test without a neutral line can be measured in a three-phase three-wire (3V3A) configuration, allowing calculation of each phase voltage.
- Achieving Higher Precision: Measuring Instrument Loss Correction Function**  
 These functions can compensate for instrument-related losses resulting from the power meter's internal impedance as well as losses related to wiring during measurement with two power meters.

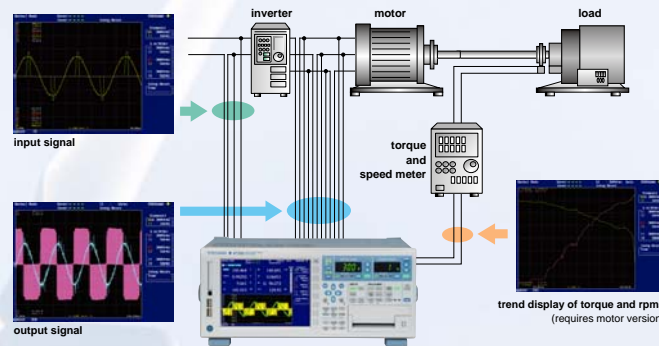


When measuring three-phase input/three-phase output with a three-phase four-wire system, you can measure input and output simultaneously by synchronizing between two units.

- Related applications**  
**Power conversion technologies such as those used in EVs and power conditioners**  
 High-precision, simultaneous measurements are required in measuring conversion efficiency in the conversion of a converter's three-phase input to a DC bus, and the conversion from an inverter's DC bus to three-phase output.

#### Evaluation of Lighting Devices

- Simultaneous Measurement of Voltage, Current, and THD (Total Harmonic distortion)**  
 Testing of lighting devices often involves measurement of voltage, current, and THD, a parameter that indicates the quality of power. This is because distortion in voltage and current waveforms is becoming more prevalent due to the increasing complexity of control systems.

The WT3000 can simultaneously measure voltage and current with THD, eliminating these inconveniences and allowing for more accurate and rapid measurements of an instrument's characteristics and fluctuations.

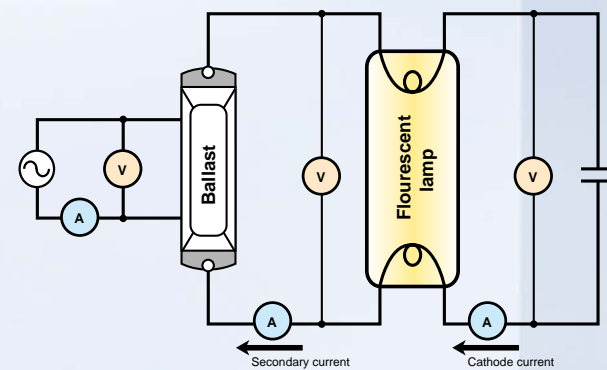

\* THD stands for *total harmonic distortion*. In other words, the distortion factor.  
 \* Please be aware that during lighting testing, the measured values and efficiencies may not be stable since the power conversion efficiency fluctuates over time due to the emission of heat.

- Lamp Current Measurement**  
 Since lamp current flows inside of fluorescent tubes, normally it cannot be measured directly. However, lamp current can be displayed by measuring secondary current and cathode current and finding the difference in their instantaneous values using the delta computation function (/DT option).

- Related applications**  
 Evaluation of power quality in equipment designed to be connected in a system, such as UPSs and power conditioners

#### High Accuracy Measurements of Transformers

- High Accuracy Even at Low Power Factors**  
 The WT3000 represents great improvement over previous models in terms of power factor error (it is approximately three times more accurate). With improved measurement accuracy in the lower power factors—such as with transformers, active power values can be measured with higher precision.
- Simultaneous Measurement of RMS and MEAN of Voltage**  
 Voltage RMS (the true RMS value) and voltage MEAN (rectified mean value calibrated to the rms value) can be measured at the same time, allowing for measurement of corrected power (Pc).
- Phase Voltage Confirmation**  
 The delta computation function (/DT option) allows both star-delta and delta-star conversion.

#### Reference equipment for power calibration

- Basic power accuracy of ±0.02% of reading**  
 The WT3000 can be used as a reference instrument for periodic in-house calibration of general-purpose power measurement instruments, such as the WT210 and WT230.



#### Harmonic measurements

- Harmonic measurements on four input elements**  
 The WT3000 can also be used to observe changes in the harmonic distortion factor in each phase. Note that this capability requires the /G5 option.
- Measurement of phase angles between phases**  
 The WT3000 can determine the phase angle formed between the voltage fundamental wave of input element 2 or 3, and the voltage fundamental wave of input element 1. Note that this capability requires the /G5 option.

## SOFTWARE

### ► Utility Software


#### WTViewer

**Communications: GP-IB, Serial (RS-232, /C2), USB (/C12), or Ethernet (/C7)**  
 WTViewer is an application software tool that reads numeric, waveform, and harmonic data measured with the WT3000 Precision Power Analyzer.

- Numeric Data**  
 WTViewer can simultaneously display voltage, current, power and various other measured parameters for one to four elements individually, and for  $\Sigma A$  and  $\Sigma B$  calculations.
- Measuring Harmonics\***  
 WTViewer can numerically or graphically display the results of measured harmonics up to the 100th order for such parameters as voltage, current, power and phase angle.  
 \* requires /G5 or /G6 option

- Vectorial Views\***  
 In three phase wiring system you can view a vectorial display of the fundamental voltage, current and phase angle. This visual presentation of the interphase relationship in a three-phase power system shows the load condition intuitively.  
 \*requires /GS or /G6 option  
 \*Excludes single phase model
- Viewing Trends**  
 You can capture and view various types of data, measured with the WT3000 on your PC in a graphical trend format. This feature lets you monitor power supply voltage fluctuations, changes in current consumption and other time-based variations.

- Setting Up the WT3000 from a PC**  
 With WTViewer, you can control the WT3000 main unit from your PC, including setting the wiring method, range, filter, scaling, and so on.
- Converting Data to CSV Format**  
 With WTViewer, you can save waveform and numeric data to your PC. From the PC you can create \*.wtb files that can be loaded in WTViewer, or \*.csv files that can be imported into Excel spreadsheets.

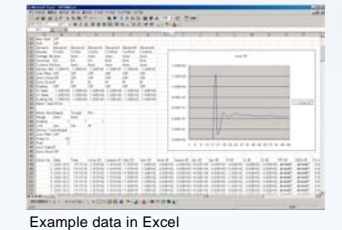

- FTP client function\***  
 This function allows data stored on the WT3000's PC card to be transferred to a PC for displaying and conversion.  
 \* requires /C7 option



\* Excel is a registered trademark of Microsoft Corporation.

#### LabVIEW Driver (free)

You can download this software program from our web site


\* LabVIEW is a registered trademark of National Instruments Corporation.



### ► Future Software Releases


#### Software for Standards-Compliant Measurements

- Communications: GP-IB or Ethernet (/C7)**
- Harmonic measurement function (requires /G6 option)**  
 Harmonics can be judged as acceptable or unacceptable in accordance with standards classifications (A, B, C, and D). In addition to simply listing measurement values, the WT3000 can also display bar graphs, current fluctuation graphs, and evaluation graphs. Bar graphs can be used to compare measurement values and standard limit values for each harmonic component.

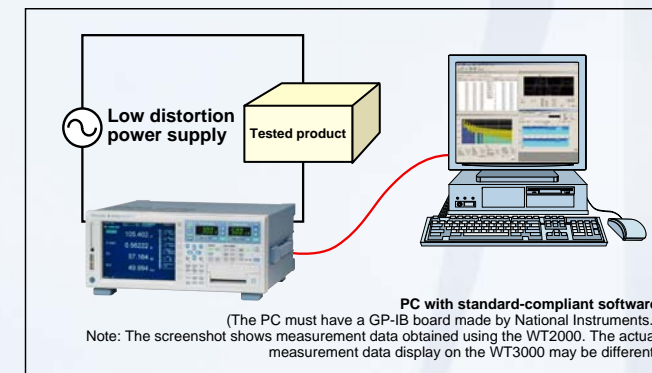

**PC with standard-compliant software**  
 (The PC must have a GP-IB board made by National Instruments.)  
 Note: The screenshot shows measurement data obtained using the WT2000. The actual measurement data display on the WT3000 may be different.


Yokogawa plans to make this software compatible with standards starting with EN61000-3-2 Ed2:2000; 2001/January 1. EN61000-3-2 Ed2:2000 was applied starting in January 2001, and the migration period extended to December 31, 2003. Starting in 2004, the standard EN61000-3-2 Ed2:2000 is applied.

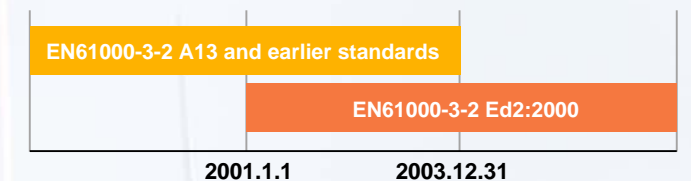

Note: This software supports EN61000-3-2 Ed2:2000, so it does not have a mode permitting measurement based on the older EN61000-3-2 standards.


- Flicker measurement function\***  
 This function enables voltage fluctuation and flicker measurements in compliance with EN61000-3-3 (Ed1:1995).

Note: The screenshot shows measurement data obtained on the WT2000 using the flicker measurement software designed for the WT2000. The measurement data display on the WT3000 may be different.  
 \* requires /FL option

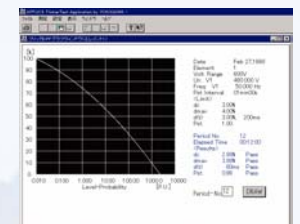

## REAR PANEL

### ► Rear Panel

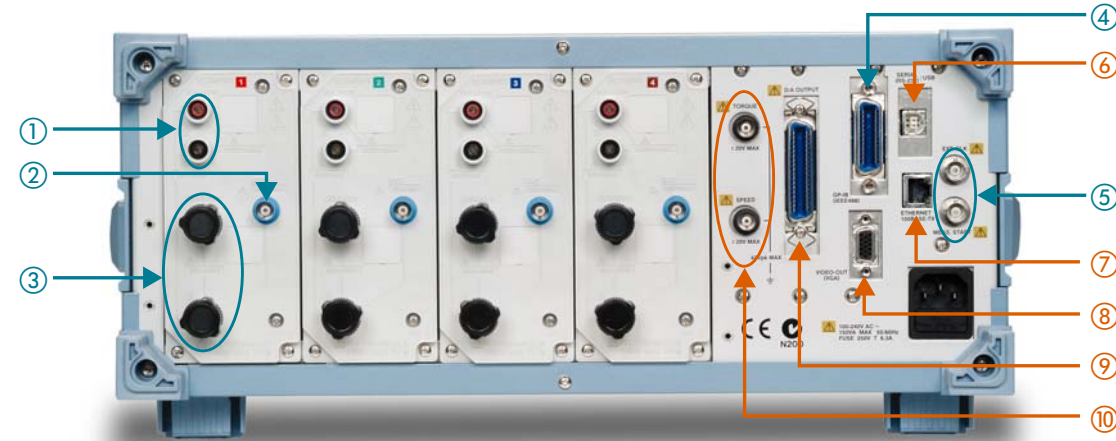

#### Standard features





- ① Voltage input terminals
- ② Current external sensor input terminals
- ③ Current direct input terminals
- ④ GP-IB port
- ⑤ BNC connector for two-system synchronized measurement

#### Optional features

- ⑥ Serial (RS-232) port (option/C2) or USB port (PC) (option/C12)
- ⑦ Ethernet port(100BASE-TX/10BASE-T) (option/C7)
- ⑧ VGA port (option/V1)
- ⑨ D/A output (option/DA)
- ⑩ Torque and speed input terminals (motor version)

## CHARACTERISTICS

### ► Example of basic characteristics showing the WT3000's high precision and excellent stability

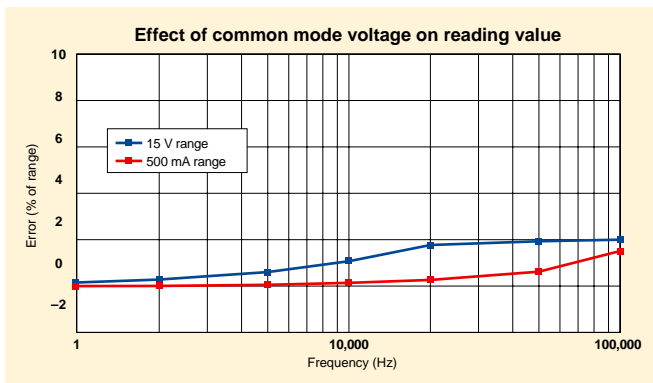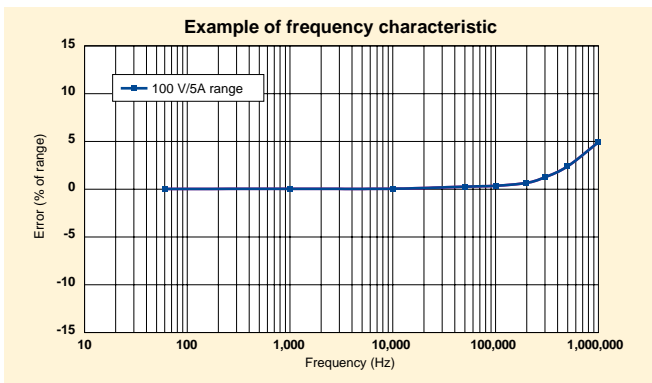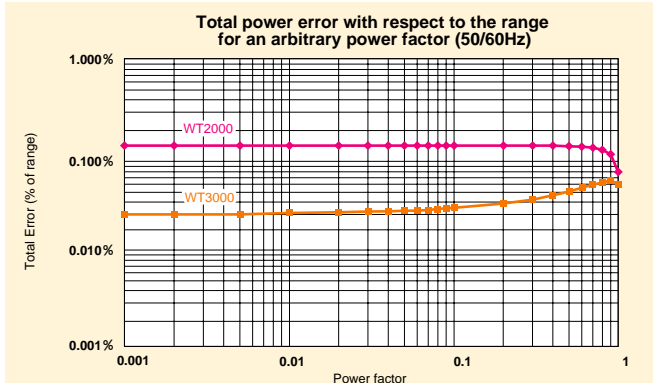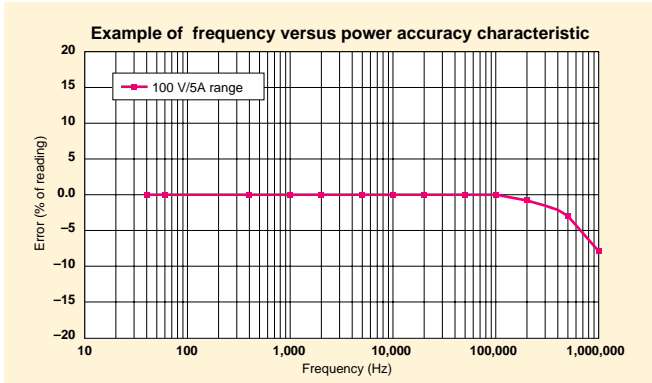

## ACCESSORIES

### ► Related products


#### Current Sensor Unit    Current Transducer    Current Clamp on Probe

<p><b>751521, 751523</b> Current Sensor Unit DC to 100kHz/600Apk</p> <ul style="list-style-type: none"> <li>Wide dynamic range: -600 A to 0 A to +600 A (DC)/600 A peak (AC)</li> <li>Wide measurement frequency range: DC to 100 kHz (-3 dB)</li> <li>High-precision fundamental accuracy: ±(0.05% of rdg + 40 mA)</li> <li>Superior noise withstanding ability and CMRR characteristic due to optimized casing design</li> </ul> <p>*751521/751523 do not conform to CE Marking</p> <p>For detailed information, see Power Meter Accessory Catalog Bulletin 7515-52E.</p>	<p><b>751574</b> Current Transducer DC to 100 kHz/600Apk</p> <ul style="list-style-type: none"> <li>Wide measurement frequency range: DC and up to 100 kHz (-3 dB)</li> <li>High-precision fundamental accuracy: ±(0.05% of reading + 40 mA)</li> <li>Wide dynamic range: 0-600 A (DC)/600 A peak (AC)</li> <li>±15 V DC power supply, connector, and load resistor required.</li> </ul> <p>For detailed information, see Power Meter Accessory Catalog Bulletin 7515-52E.</p>	<p><b>751552</b> Current Clamp on Probe AC1000Arms (1400Apeak)</p> <ul style="list-style-type: none"> <li>Measurement frequency range: 30 Hz to 5 kHz</li> <li>Basic accuracy: ±0.3% of reading</li> <li>Maximum allowed input: AC 1000 Arms, max 1400 Apk (AC)</li> <li>Current output type: 1 mA/A</li> </ul> <p>A separately sold fork terminal adapter set (758921), measurement leads (758917), etc. are required for connection to WT3000. For detailed information, see Power Meter Accessory Catalog Bulletin 7515-52E.</p>
---	--	---

#### Adapters and Cables

<p><b>758917</b> Measurement leads</p> <p>Two leads in a set. Use 758917 in combination with 758922 or 758929.</p> <p>Total length: 75 cm Rating: 1000 V, 32 A</p>	<p><b>758922</b> Small alligator adapters</p> <p>For connection to measurement leads (758917). Two in a set.</p> <p>Rating: 300 V</p>	<p><b>758929</b> Large alligator adapters</p> <p>For connection to measurement leads (758917). Two in a set.</p> <p>Rating: 1000 V</p>	<p><b>758923*1</b> Safety terminal adapter set (spring-hold type) Two adapters in a set.</p>	<p><b>758931*1</b> Safety terminal adapter set</p> <p>Screw-fastened adapters. Two adapters in a set. 1.5 mm Allen wrench included for tightening.</p>	<p><b>758921</b> Fork terminal adapter</p> <p>Two adapters (red and black) to a set. Used when attaching banana plug to binding post.</p>
<p><b>758924</b> Conversion adapter</p> <p>For conversion between male BNC and female banana plug</p>	<p><b>366924*2</b> BNC cable</p> <p>BNC-BNC 1m. For connection to simultaneously measurement with 2 units, or for input external trigger signal.</p>	<p><b>366925*2</b> BNC cable</p> <p>BNC-BNC 2m. For connection to simultaneously measurement with 2 units, or for input external trigger signal.</p>	<p><b>B9284LK</b> External Sensor Cable</p> <p>For connection the external input of the WT3000 to current sensor. Length:50cm</p>	<p>⚠ Due to the nature of this product, it is possible to touch its metal parts. Therefore, there is a risk of electric shock, so the product must be used with caution.</p> <p>*1 Diameters of cables that can be connected to the adapters 758923 core diameter: 2.5 mm or less; sheath diameter: 5.0 mm or less 758931 core diameter: 1.8 mm or less; sheath diameter: 3.9 mm or less *2 Use with a low-voltage circuit (42V or less) *3 The coax cable is simply cut on the current sensor side. Preparation by the user is required.</p>	


#### Connecting Diagram

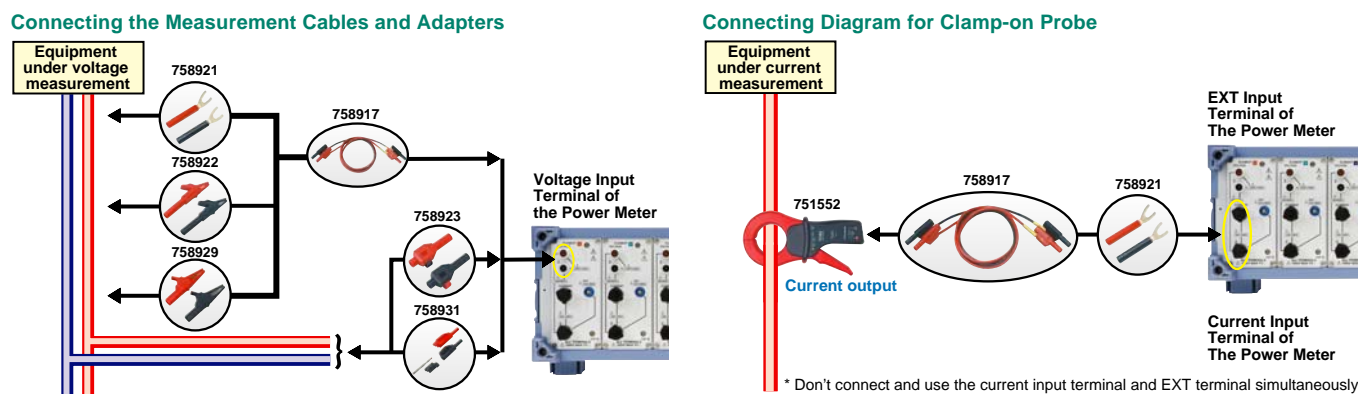

## SUPPORTS Crest Factor 6

The crest factor is the ratio of the waveform peak value and the RMS value.

$$\text{Crest factor (CF, peak factor)} = \frac{\text{waveform peak}}{\text{RMS value}}$$

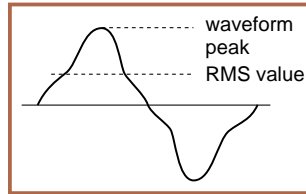

When checking the measurable crest factor of our power measuring instruments, please refer to the following equation.

$$\text{Crest factor (CF)} = \frac{\{\text{measuring range} \times \text{CF setting (3 or 6)}\}}{\text{measured value (RMS)}}$$

\* However, the peak value of the measured signal must be less than or equal to the continuous maximum allowed input

\* The crest factor on a power meter is specified by how many times peak input value is allowed relative to rated input value. Even if some measured signals exist whose crest factors are larger than the specifications of the instrument (the crest factor standard at the rated input), you can measure signals having crest factors larger than the specifications by setting a

measurement range that is large relative to the measured signal. For example, even if you set CF = 3, CF5 or higher measurements are possible as long as the measured value (RMS) is 60% or less than the measuring range. Also, for a setting of CF = 3, measurements of CF = 300 are possible with the minimum effective input (1% of measuring range).

## Comparison of Specifications and Functions in WT3000, Other WT Series Models, and PZ4000

	WT3000	WT2000	WT1600	PZ4000	
Basic power accuracy (50/60 Hz)	0.02% of reading + 0.04% of range	0.04% of reading + 0.04% of range	0.1% of reading + 0.05% of range	0.1% of reading + 0.025% of range	
Measurement power bandwidth	DC, 0.1 Hz to 1 MHz	DC, 2 Hz to 500 kHz (voltage, current) DC, 2 Hz to 300 kHz (power)	DC, 0.5 Hz to 1 MHz	DC, 0.1 Hz to 1 MHz	
Input elements	1, 2, 3, 4	1, 2, 3	1, 2, 3, 4, 5, 6	1, 2, 3, 4	
Range	Voltage range	15/30/60/100/150/300/600/1000[V] (when crest factor is 3) 7.5/15/30/50/75/150/300/500[V] (when crest factor is 6)	10/15/30/60/100/150/300/600[V] (for crest factors 3 and 6)	1.5/3/6/10/15/30/60/100/150/300/600/1000[V] (when crest factor is 3) 750m/1.5/3/5/7.5/15/30/50/75/150/300/500[V] (when crest factor is 6)	30/60/120/200/300/600/1200/2000[Vpk]
	Current range	Direct input 0.5/1/2/5/10/20/30[A] (when crest factor is 3) 0.25/0.5/1/2.5/5/10/15[A] (when crest factor is 6) External sensor input 50m/100m/200m/500m/1/2.5/5/10[V] (when crest factor is 3) 25m/50m/100m/250m/500m/1/2.5/5[V] (when crest factor is 6)	1/2/5/10/20/30 [A] (for crest factors 3 and 6)	Select from 10m/20m/50m/100m/200m/500m/1/2/5[A] or 1/2/5/10/20/50[A] (when crest factor is 3) 5m/10m/25m/50m/100m/250m/500m/1/2.5[A] or 0.5/1/2.5/5/10/25[A] (when crest factor is 6)	5A module: 0.1/0.2/0.4/1/2/4/10[Apk] (5Arms) 20A module: 0.1/0.2/0.4/1/2/4/10[Apk] (5Arms) 1/2/4/10/20/40/100[Apk] (20Arms)
Guaranteed accuracy range for voltage and current ranges	1% to 130%	10% to 130%	1% to 110%	5% to 70%	
Main measurement parameters	Voltage, current, active power, reactive power, apparent power, power factor, phase angle, peak voltage, peak current, crest factor				
Peak hold (instantaneous maximum value hold)	✓	✓	✓	✓	
MAX hold	✓	✓	✓	✓	
Voltage RMS/MEAN simultaneous measurement	✓	(custom-made)	✓	✓	
RMS/MEAN/AC/DC simultaneous measurement	✓		✓	✓	
Mean active power	✓ (user-defined function)	✓	✓ (user-defined function)	✓	
Active power amount (WP)	✓		✓		
Apparent power amount (WS)	✓		✓		
Reactive power amount (WQ)	✓	One from voltages or currents on installed input elements			
Frequency	2 channels (up to 8 channels with option /FQ)	✓	Up to three from voltages or currents on installed input elements	All installed voltages and currents (up to 8 channels)	
Efficiency			✓	✓	
Phase angle between phases (fundamental wave)	(G5, G6) (G6 is being planned)(opt.)		✓	✓	
Motor evaluation	Torque, rotating speed input (motor velocity)(opt.)		Torque and rotational velocity input(opt.)	Torque and rotational velocity input (requires sensor input module 253771)(opt.)	
FFT spectral analysis	Planned for release (G6)(opt.)		✓	✓	
User-defined functions	✓ (20 functions)	50,000	✓ (4)	✓ (4)	
Display resolution	Voltage, current, power	600,000	500,000	60,000	
	Power amount, current amount	999,999	199,999	999,999	99,999 or 999,999
Frequency	99,999	7-segment display	99,999	No integration function	
Display	Display	8.4-inch TFT color LCD	Numerical values (4 values)	6.4-inch TFT color LCD	
	Display format	Numerical values, waveforms, trends, bar graphs, vectors	Approximately 110 kS/s	Numerical values, waveforms, trends, bar graphs, vectors	Numerical values, waveforms, trends, bar graphs, vectors, X-Y
Measurement functions	Sampling frequency	Approximately 200 kS/s	(opt.)	Approximately 200 kS/s	Maximum 5 MS/s
	Harmonic measurement	(G5, G6) (G6 is being planned)(opt.)	(opt.)	(opt.)	✓
IEC standards-compliant harmonic measurement	Planned for release (G6)(opt.)		(opt.)	✓	
Flicker measurement	Planned for release (FL)(opt.)				
Compensation function	✓				
Delta calculation function	(DT)(opt.)	14 channels	✓ (diff are not supported)	✓	
DA output	20 channels (DA)(opt.)		30 channels(opt.)		
Synchronized operation	✓		✓	✓	
Storage (internal memory for storing data)	approximately 30MB		Approximately 11MB	None, but acquisition memory has 100 kW/channel (up to 4 MW/channel can be installed with option)	
Other features	Interfaces	GP-IB; RS-232 (C2)(opt.); USB (C12) VGA output (V1)(opt.); Ethernet (C7)(opt.)	GP-IB or RS-232; SCSI(opt.); Ethernet(opt.); VGA output	GP-IB; RS-232; Centronics; SCSI(opt.)	
	Communication command compatibility	IEEE standard 488.2 or earlier. None (communication commands vary from product to product)			
Communication command standards	Commands in IEEE488.2 standard	250m/500m/2[S]	Commands in IEEE488.2 standard	Commands in IEEE488.2 standard	
Data updating interval	50m/100m/250m/500m/1/2/5/10/20[S]		50m/100m/250m/500m/1/2/5/10/20[S]	Depends on waveform acquisition length and calculations	
Removable storage	PC card interface; USB (C5)(opt.)	Built-in printer (front side)(opt.)	FDD	FDD	
Printer	Built-in printer (front side) (B5)(opt.)		Built-in printer (front side)(opt.)	Built-in printer (top side)(opt.)	

There are limitations on some specifications and functions. See the individual product catalogs for details.

(opt.) Optional

## WT3000 SPEC

### WT3000 Specifications

Inputs	Specification
Item	Specification
Input terminal type	Voltage Plug-in terminal (safety terminal) Current • Direct input: Large binding post • External sensor input: Insulated BNC connector
Input type	Voltage Floating input, resistive potential method Current Floating input, shunt input method
Measurement range	Voltage 15 V, 30 V, 60 V, 100 V, 150 V, 300 V, 600 V, 1000 V (for crest factor 3) 7.5 V, 15 V, 30 V, 50 V, 75 V, 150 V, 300 V, 500 V (for crest factor 6) Current • Direct input 500 mA, 1 A, 2 A, 5 A, 10 A, 20 A, 30 A (for crest factor 3) 250 mA, 500 mA, 1 A, 2.5 A, 5 A, 10 A, 15 A (for crest factor 6) • External sensor input 50 mV, 100 mV, 200 mV, 500 mV, 1 V, 2 V, 5 V, 10 V (for crest factor 3) 25 mV, 50 mV, 100 mV, 250 mV, 500 mV, 1 V, 2.5 V, 5 V (for crest factor 6)
Instrument loss (input resistance)	Voltage Approximately 10 MΩ // 5 pF Current • Direct input: Approximately 5.5 mΩ + approximately 0.03 μH • External sensor input: Approximately 1 MΩ
Instantaneous maximum allowed input (1 second or less)	Voltage Peak voltage of 2.5 kV or RMS of 1.5 kV, whichever is lower Current • Direct input: Peak current of 150 A or RMS of 50 A, whichever is lower • External sensor input: Peak not to exceed 10 times the range
Continuous maximum allowed input	Voltage Peak voltage of 1.6 kV or RMS of 1.1 kV, whichever is lower Current • Direct input: Peak current of 90 A or RMS of 33 A, whichever is lower • External sensor input: Peak not to exceed 5 times the range
Continuous maximum common mode voltage (50/60 Hz)	1000 Vrms
Influence from common mode voltage	Apply 1000 Vrms with the voltage input terminals shorted and the current input terminals open. • 50/60 Hz: ±0.01% of range or less • Reference value up to 200 kHz Voltage: ±3/range * % of range or less. However, 3% or less. Current direct input and current sensor input: ± (max. range/range) * 0.001 * % of range or less. However, 0.01% or more. The units of f are kHz. The maximum rated range within equations is 30 A or 10 V.
Line filter	Select OFF, 500 Hz, 5.5 kHz, or 50 kHz.
Frequency filter	Select OFF, or ON
A/D converter	Simultaneous voltage and current conversion and 16-bit resolution. Conversion speed (sampling rate): Approximately 5 μs. See harmonic measurement items for harmonic display.
Range switching	Can be set for each input element.
Auto range functions	Increasing range value • When the measured values of U and I exceed 110% of the range rating • When the peak value exceeds approximately 330% of the range rating (or approximately 660% for crest factor 6) Decreasing range value • When the measured values of U and I fall to 30% or less of the range rating, and Upk and Ipk are 300% or less of the lower range value (or 600% for crest factor 6)

Continuous maximum allowed input  
Voltage  
Peak voltage of 1.6 kV or RMS of 1.1 kV, whichever is lower  
Current  
• Direct input: Peak current of 90 A or RMS of 33 A, whichever is lower  
• External sensor input: Peak not to exceed 5 times the range

Continuous maximum common mode voltage (50/60 Hz)  
1000 Vrms  
Influence from common mode voltage  
Apply 1000 Vrms with the voltage input terminals shorted and the current input terminals open.  
• 50/60 Hz: ±0.01% of range or less  
• Reference value up to 200 kHz  
Voltage:  
±3/range \* % of range or less. However, 3% or less.  
Current direct input and current sensor input:  
± (max. range/range) \* 0.001 \* % of range or less.  
However, 0.01% or more. The units of f are kHz. The maximum rated range within equations is 30 A or 10 V.

Line filter  
Select OFF, 500 Hz, 5.5 kHz, or 50 kHz.  
Frequency filter  
Select OFF, or ON  
A/D converter  
Simultaneous voltage and current conversion and 16-bit resolution. Conversion speed (sampling rate): Approximately 5 μs. See harmonic measurement items for harmonic display.

Range switching  
Can be set for each input element.  
Auto range functions  
Increasing range value  
• When the measured values of U and I exceed 110% of the range rating  
• When the peak value exceeds approximately 330% of the range rating (or approximately 660% for crest factor 6)  
Decreasing range value  
• When the measured values of U and I fall to 30% or less of the range rating, and Upk and Ipk are 300% or less of the lower range value (or 600% for crest factor 6)

### Display

Display 8.4-inch color TFT LCD monitor  
Total number of pixels\* 640 (horiz.) x 480 (vert.) dots  
Waveform display resolution 501 (horiz.) x 432 (vert.) dots

Same as the data update rate.

- Exceptions are listed below.
- The display update interval of numeric display (4, 8, and 16 items) is 250 ms when the data update rate is 50 ms or 100 ms.
- The display update interval of numeric display (ALL, Single List, and Dual List) is 500 ms when the data update rate is 50 ms to 250 ms.
- The display update rate of the trend display, bar graph display, and vector display is 1 s when the data update rate is 50 ms to 500 ms.
- The display update interval of the waveform display is approximately 1 s when the data update rate is 50 ms to 1 s. However, it may be longer depending on the trigger setting.
- \* Up to 0.02% of the pixels on the LCD may be defective.

### Calculation Functions

	Single-phase, 3 wire	3 phase, 3 wire	3 phase, 3 wire (3 voltage 3 current)	3 phase, 4 wire
UΣ [V]	(U1+U2)/2		(U1+U2+U3)/3	
IΣ [A]	(I1+I2)/2		(I1+I2+I3)/3	
PΣ [W]	P1+P2			P1+P2+P3
SΣ [VA]	TYPE1 S1+S2 TYPE2 √3/2 (S1+S2) TYPE3 √3/3 (S1+S2+S3)			S1+S2+S3
QΣ [var]	TYPE1 Q1+Q2 TYPE2 √SΣ²-PΣ² TYPE3 Q1+Q2			Q1+Q2+Q3
PcΣ [W]	Pc1+Pc2			Pc1+Pc2+Pc3
WPΣ [Wh]	WP1+WP2			WP1+WP2+WP3
WP+Σ [Wh]	WP+1+WP+2			WP+1+WP+2+WP+3
WP-Σ [Wh]	WP-1+WP-2			WP-1+WP-2+WP-3
qΣ [Ah]	q1+q2			q1+q2+q3
q+Σ [Ah]	q+1+q+2			q+1+q+2+q+3
q-Σ [Ah]	q-1+q-2			q-1+q-2+q-3
WQΣ [varh]	$\frac{1}{N} \sum_{n=1}^N  Q\Sigma(n)  \times \text{Time}$ QΣ(n) is the nth reactive power Σ function, and N is the number of data updates.			
WSΣ [VAh]	$\frac{1}{N} \sum_{n=1}^N S\Sigma(n) \times \text{Time}$ SΣ(n) is the nth apparent power Σ function, and N is the number of data updates.			
λΣ	$\frac{P\Sigma}{S\Sigma}$			
∅Σ [°]	$\cos^{-1} \left( \frac{P\Sigma}{S\Sigma} \right)$			

Note1) The instrument's apparent power (S), reactive power (Q), power factor (λ), and phase angle (∅) are calculated using measured values of voltage, current, and active power. (However, reactive power is calculated directly from sampled data when TYPE3 is selected.) Therefore, when distorted waveforms are input, these values may be different from those of other measuring instruments based on different measuring principals.  
Note 2) The value of Q in the QS calculation is calculated with a preceding minus sign (-) when the current input leads the voltage input, and a plus sign when it lags the voltage input, so the value of QS may be negative.

η [%]	Set a efficiency calculation up to 4
User-defined functions F1-F20	Create equations combining measurement function symbols, and calculate up to twenty numerical data.

### Waveform Display (WAVE display)

Waveform display items	Voltage and current from elements 1 through 4 Motor version torque and waveform of revolution speed
------------------------	--

### Accuracy

	Voltage/current	Power
[Conditions]	DC: 0.05% of reading+0.05% of range 0.1Hz<f<30Hz 0.1% of reading+0.2% of range 30Hz<f<45Hz 0.03% of reading+0.05% of range 45Hz<f<66Hz 0.01% of reading+0.03% of range 66Hz<f<1kHz 0.03% of reading+0.05% of range 1kHz<f<10kHz 0.1% of reading+0.05% of range 10kHz<f<50kHz 0.3% of reading+0.1% of range 50kHz<f<100kHz 0.012x% of reading+0.2% of range 100kHz<f<500kHz 0.009x% of reading+0.5% of range 500kHz<f<1MHz (0.022x-7)% of reading+1% of range	DC: 0.05% of reading+0.1% of range 0.1Hz<f<30Hz 0.2% of reading+0.3% of range 30Hz<f<45Hz 0.05% of reading+0.05% of range 45Hz<f<66Hz 0.02% of reading+0.04% of range 66Hz<f<1kHz 0.05% of reading+0.05% of range 1kHz<f<10kHz 0.15% of reading+0.1% of range 10kHz<f<50kHz 0.3% of reading+0.2% of range 50kHz<f<100kHz 0.014x% of reading+0.3% of range 100kHz<f<500kHz 0.012x% of reading+1% of range 500kHz<f<1MHz 0.048x-19% of reading+2% of range
Temperature: 23±5°C		
Humidity: 30 to 75%RH		
Input waveform:		
Sine wave		
Common mode voltage:		
0 V		
Crest factor: 3		
Line filter: OFF		
λ (power factor): 1		
After warm-up		
After zero level		
compensation or range value change while wired.		
f is frequency		
6-month		
* These conditions are all accuracy condition in this section.		

- \* The units of f in the reading error equation are kHz.
- \* Accuracy of waveform display data, Upk and Ipk  
Add 3% of range to the accuracy above. However, add 3% of range +5mV for external input (reference value). Effective input range is within ±300% (within ±600% for crest factor 6)  
• Influenced by changes in temperature after zero level correction or range value changes.  
Add 50ppm of range/°C to the voltage DC accuracy, 0.2 mA/°C to the current DC accuracy, 0.02 mV/°C to the external current DC accuracy, and influence of voltage times influence of current to the power DC accuracy.
- Influence of self heating due to current input  
When the input signal is current, add 0.00002 x I²% of rdg, and for DC add 0.00002 x I²% of rdg + 0.003 x I mA to the current and power accuracy. I is the reading value of current (A). Please note that the influence of self-heating is present until the shunt resistance temperature drops, even when the current input value is small.
- Additions to accuracy according to the data update rate  
Add 0.05% of rdg when it is 100 ms, and 0.1% of rdg when 50ms.
- Range of guaranteed accuracy by frequency, voltage, and current  
All accuracies between 0.1 Hz and 10 Hz are reference values.  
If the voltage exceeds 750 V at 30 kHz-100 kHz, or exceeds (2.2 x 10⁹ / f(kHz))V at 100 kHz-1 MHz, the voltage and power values are reference values.  
If the current exceeds 20 A at DC, 10 Hz-45Hz, or 400 Hz-200 kHz; or if it exceeds 10 A at 200 kHz-500 kHz; or exceeds 5 A at 500 kHz-1 MHz, the current and power accuracies are reference values.
- Accuracy for crest factor 6: Range accuracy of crest factor 3 for two times range of crest factor 6.

	Voltage/current	Power
Total power error with respect to the range for an arbitrary power factor $\lambda$ (exclude $\lambda = 1$ )	—	When $\lambda=0$ Apparent power reading: $\pm 0.03\%$ in the 45 to 66 Hz range All other frequencies are as follows (however, these are only reference values): Apparent power reading: $\pm (0.03 + 0.05 \times f(\text{kHz}))\%$ $0 < \lambda < 1$ (45 Hz to 66 Hz) (Power reading Error (%)) + (power range error (%)) $\times$ (Power range/Apparent power reading) + power reading $\times$ ( $\tan \theta$ ) (influence when $\lambda = 0$ ) %
Influence of line filter	When cutoff frequency is 500 Hz *45 to 66Hz: Add 0.2% of reading Under 45 Hz: Add 0.5% of reading When cutoff frequency is 5.5 kHz *66Hz or less: Add 0.2% of reading 66 to 500Hz: Add 0.5% of reading When cutoff frequency is 50 kHz *500Hz or less: Add 0.2% of reading 500 to 5kHz: Add 0.5% of reading	When cutoff frequency is 500 Hz *45 to 66Hz: Add 0.3% of reading Under 45 Hz: Add 1% of reading When cutoff frequency is 5.5 kHz *66Hz or less: Add 0.3% of reading 66 to 500Hz: Add 1% of reading When cutoff frequency is 50 kHz *500Hz or less: Add 0.3% of reading 500 to 5kHz: Add 1% of reading
Lead/Lag Detection (d (LEAD)/G (LAG) of the phase angle and symbols for the reactive power Q <sub>s</sub> calculation) * The s symbol shows the lead/lag of each element, and ** indicates leading.	The phase lead and lag are detected correctly when the voltage and current signals are both sine waves, the lead/lag is 50% of the range rating (or 100% for crest factor 6), the frequency is between 20 Hz and 10 kHz, and the phase angle is $\pm (5^\circ$ to $175^\circ)$ or more.	
Temperature coefficient	$\pm 0.02\%$ of reading/ $^\circ\text{C}$ at $5\text{--}18^\circ$ or $28\text{--}40^\circ\text{C}$ .	
Effective input range	Udc and Idc are 0 to $\pm 130\%$ of the measurement range Urms and Irms are 1 to $\pm 130\%$ of the measurement range (or 2%–130% for crest factor 6) Umn and Imn are 10 to $\pm 130\%$ of the measurement range Urms and Imrms are 10 to $\pm 130\%$ of the measurement range Power is 0 to $\pm 130\%$ for DC measurement, 1 to $\pm 130\%$ of the voltage and current range for AC measurement, and up to $\pm 130\%$ of the power range. However, when the data update rate is 50 ms, 100 ms, 5 sec, 10 sec, or 20 sec, the synchronization source level falls below the input signal of frequency measurement. 140% of the voltage and current range rating. The accuracy at 110 to 130% of the measurement range is the reading error $\times 1.5$ .	
Max. display	140% of the voltage and current range rating	
Min. display	Urms and Irms are up to 0.3% relative to the measurement range (or up to 0.6% for a crest factor of 6). Umn, Urms, Imn, and Imrms are up to 2% (or 4% for a crest factor of 6).	
Measurement lower limit frequency	Data update rate    50ms    100ms/250ms/500ms    1s    2s    5s    10s    20s Measurement lower limit frequency    45Hz    25Hz    20Hz    10Hz    5Hz    2Hz    0.5Hz    0.2Hz    0.1Hz	
Accuracy of apparent power S	Voltage accuracy + current accuracy	
Accuracy of reactive power Q	Accuracy of apparent power $\pm (\sqrt{(1.0004 - \lambda^2)} - \sqrt{(1 - \lambda^2)}) \times 100\%$ of range	
Accuracy of power factor $\lambda$	$\pm [(\lambda - 1/1.0002) +  \cos \theta - \cos(\theta + \sin^{-1}(\text{influence of power factor of power when } \lambda = 0\% / 100)) ] \pm 1$ digit when voltage and current is at rated input of the measurement range. $\theta$ is the phase difference of voltage and current.	
Accuracy of phase difference $\theta$	$\pm [ \theta - \cos^{-1}(\lambda/1.0002)  + \sin^{-1}(\text{influence of power factor of power when } \lambda = 0\% / 100)]$ deg $\pm 1$ digit when voltage and current is at rated input of the measurement range	
One-year accuracy	Add the accuracy of reading error (Six-month) $\times 0.5$ to the accuracy six-month	

## Functions

Measurement method	Digital multiplication method
Crest factor	3 or 6 (when inputting rated values of the measurement range), and 300 relative to the minimum valid input. However, 1.6 or 3.2 at the maximum range (when inputting rated values of the measurement range), and 160 relative to the minimum valid input.
Measurement period	Interval for determining the measurement function and performing calculations. Period used to determine and compute the measurement function. • The measurement period is set by the zero crossing of the reference signal (synchronization source) when the data update interval is 50 ms, 100 ms, 5 s, 10 s, or 20 s (excluding watt hour WP as well as ampere hour q during DC mode). • Measured through exponential averaging on the sampled data within the data update interval when the data update interval is 250 ms, 500 ms, 1 s, or 2 s. • For harmonic measurement (/G5 option), the measurement period is from the beginning of the data update interval to 9000 points at the harmonic sampling frequency.
Wiring	You can select one of the following five wiring settings. 1P2W (single phase, two-wire), 1P3W (single phase, 3 wire), 3P3W (3 phase, 3 wire), 3P4W (3 phase, 4 wire), 3P3W/3V3A (3 phase, 3 wire, 3 volt/3 amp measurement). However, the number of available wiring settings varies depending on the number of installed input elements. Up to four, or only one, two, or three wiring settings may be available.
Compensation Functions	• Efficiency Compensation Compensation of instrument loss during efficiency calculation • Wiring Compensation Compensation of instrument loss due to wiring • 2 Wattmeter Method Compensation Compensation for 2 wattmeter method
Scaling	When inputting output from external current sensors, VT, or CT, set the current sensor conversion ratio, VT ratio, CT ratio, and power coefficient in the range from 0.0001 to 99999.9999.
Input filter	Line filter or frequency filter settings can be entered.

Averaging	• The average calculations below are performed on the normal measurement parameters of voltage U, current I, power P, apparent power S, reactive power Q. Power factor $\lambda$ and phase angle $\theta$ are determined by calculating the average of P and S. Select exponential or moving averaging. • Exponential average Select an attenuation constant of 2, 4, 8, 16, 32, or 64. • Moving average Select the number of averages from 8, 16, 32, 64, 128, or 256. • The average calculations below are performed on the harmonic display items of voltage U, current I, power P, apparent power S, reactive power Q. Power factor $\lambda$ is determined by calculating the average of P and Q. Only exponential averaging is performed. Select an attenuation constant of 2, 4, 8, 16, 32 or 64 Select 50 ms, 100 ms, 250 ms, 500 ms, 1 s, 2 s, 5 s, 10 s, or 20 s.
Data update rate	At maximum, two times the data update rate (only during numerical display)
Response time	Holds the data display. Executes a single measurement during measurement hold.
Hold	Compensates the zero level.
Single	
Zero level compensation/Null	

## Integration

Mode	Select a mode of Manual, Standard, Continuous (repeat), Real Time Control Standard, or Real Time Control Continuous (Repeat). Integration can be stopped automatically using the integration timer setting. 0000h00m00s–10000h00m00s
Timer	If the count over integration time reaches the maximum integration time (10000 hours), or if the integration value reaches max/min display integration value ( $\pm 999999$ MWh or $\pm 999999$ Mah), the elapsed time and value is saved and the operation is stopped.
Count over	$\pm$ [power accuracy (or current accuracy) + time accuracy] $\pm 0.02\%$ of reading EXT START, EXT STOP, EXT RESET, EXT HOLD, EXT SINGLE and EXT PRINT (all input signal) / INTEG BUSY (output signal). Requires /DA option.
Accuracy	
Time accuracy	
Remote control	

## Display

• Numerical display function	Display resolution    600000 Number of display items    Select 4, 8, 16, all, single list, or dual list.
• Waveform display items	No. of display rasters    501 Peak-peak compressed data Range from 0.5 ms–2 s/div. However, it must be 1/10th of the data update rate.
Triggers	Edge type Trigger Type    Select Auto or Normal. Triggers are turned OFF automatically during integration. Trigger Mode Select voltage, current, or external clock for the input to each input element. Trigger Source    Select (Rising), (Falling), or (Rising/Falling). When the trigger source is the voltage or current input to the input elements. Set in the range from the center of the screen to $\pm 100\%$ (top/bottom edge of the screen). Setting resolution: 0.1% When the trigger source is Ext Clk, TTL level. Voltage and current input to the waveform vertical axis zoom input element can be zoomed along the vertical axis. Set in the range of 0.1 to 100 times. ON/OFF can be set for each voltage and current input to the input element. You can select 1, 2, 3 or 4 splits for the waveform display. Select dot or linear interpolation. Select graticule or cross-grid display. Upper/lower limit (scale value), and waveform label ON/OFF. When you place the cursor on the waveform, the value of that point is measured.
Trigger Slope	
Trigger Level	

Vertical axis Zoom	
ON/OFF	
Format	
Interpolation	
Graticule	
Other display ON/OFF	
Cursor measurements	
Zoom function	No time axis zoom function * Since the sampling frequency is approximately 200 kHz, waveforms that can be accurately reproduced are those of about 10 kHz.

• Vector Display/Bar Graph Display	Vector display    Vector display of the phase difference in the fundamental waves of voltage and current. Bar graph display    Displays the size of each harmonic in a bar graph.
• Trend display	Number of measurement channels Up to 16 parameters Displays trends (transitions) in numerical data of the measurement functions in a sequential line graph.
• Simultaneous display	Two windows can be selected (from numerical display, waveform display, bar graph display, or trend display) and displayed in the upper and lower parts of the screen.
• Saving and Loading Data	Settings, waveform display data, numerical data, and screen image data can be saved to media. Saved settings can be loaded from a medium.

## Store function

Internal memory size	Approximately 30 MB		
Store interval (waveform OFF)	Maximum 50msec to 99 hour 59 minutes 59 seconds.		
Guideline for Storage Time (Waveform Display OFF, Integration Function OFF)			
Number of measurement channels	Measured Items (Per CH)	Storage Interval	Storable Amnt. of Data
2ch	3	50 ms	Approx. 10 hr 20 m
2ch	10	1 sec	Approx. 86 hr
4ch	10	50 ms	Approx. 2 hr 30 m
4ch	20	1 sec	Approx. 24 hr

Note: Depending on the user-defined math, integration, and other settings, the actual measurement time may be shorter than stated above.  
Store function can't use in combination with auto print function.

## Motor Evaluation Function (-MV, Motor Version)

Measurement Function	Method of Determination, Equation
Rotating speed	When the input signal from the revolution sensor is DC voltage (analog signal) Input voltage from revolution sensor $\times$ scaling factor Scaling factor: Number of revolutions per 1 V input voltage When the input signal from the revolution sensor is number of pulses Number of input pulses from revolution sensor per minute $\times$ Scaling factor Number of pulses per rotation
Torque	When the type of input signal from the torque meter is DC voltage (analog signal) Input voltage from torque meter $\times$ scaling factor Scaling factor: Torque per 1 V input voltage When the type of input signal from the torque is number of pulses Enter N-m equivalent to upper- and lower-limit frequencies to determine an inclination from these two frequencies, and then multiply the number of pulses.
SyncSp	$120 \times \text{freq. of the freq. meas. source} / \text{motor's number of poles}$
Slip[%]	$\text{SyncSp-Speed} / \text{SyncSp} \times 100$
Motor output Pm	$2\pi \times \text{Speed} \times \text{Torque} / 60 \times \text{scaling factor}$

Revolution signal, torque signal	When revolution and torque signals are DC voltage (analog input) Connector type    Insulated BNC connector Input range    1 V, 2 V, 5 V, 10 V, 20 V Effective input range    0%– $\pm 110\%$ of measurement range Input resistance    Approximately 1 M $\Omega$ Continuous maximum allowed input $\pm 22$ V Continuous maximum common mode voltage $\pm 42$ Vpeak or less Accuracy $\pm (0.1\%$ of reading + $0.1\%$ of range) Temperature coefficient $\pm 0.03\%$ of range/ $^\circ\text{C}$
• When revolution and torque signals are pulse input	Connector type    Insulated BNC connector Frequency range    2 Hz–200 kHz Amplitude input range $\pm 12$ Vpeak Effective amplitude    1 V (peak-to-peak) or less Input waveform duty ratio    50%, square wave Input resistance    Approximately 1 M $\Omega$ Continuous maximum common mode voltage $\pm 42$ Vpeak or less Accuracy $\pm (0.05\%$ of reading + 1mHz)

## Added Frequency Measurement (/FQ Optional)

Device under measurement	Select up to two frequencies of the voltage or current input to the input elements for measurement. If the frequency option (/FQ) is installed, the frequencies of the voltages and currents being input to all input elements can be measured.
Measurement method	Reciprocal method
Measurement range	Data Update Rate    Measuring Range 50ms    45Hz $\leq$ f $\leq$ 1MHz 100ms    25Hz $\leq$ f $\leq$ 1MHz 250ms    10Hz $\leq$ f $\leq$ 500kHz 500ms    5Hz $\leq$ f $\leq$ 200kHz 1s    2.5Hz $\leq$ f $\leq$ 100kHz 2s    1.5Hz $\leq$ f $\leq$ 50kHz 5s    0.5Hz $\leq$ f $\leq$ 20kHz 10s    0.25Hz $\leq$ f $\leq$ 10kHz 20s    0.15Hz $\leq$ f $\leq$ 5kHz
Accuracy	$\pm 0.05\%$ of reading When the input signal levels are greater than or equal to 25 mV (current external sensor input) and 150 mA (current direct input) respectively, and the signal is greater than or equal to 30% (0.1 Hz–440 Hz, frequency filter ON), 10% (440 Hz–500 kHz), or 30% (500 kHz–1 MHz) of the measurement range. However, when the measuring frequency is smaller or equal to 2 times of above lower frequency, the input signal is greater than or equal to 50%. Add 0.05% of reading when current external input is smaller than or equal to 50 mV input signal level for each is double for crest factor 6.

• Delta Calculation Function (/DT Optional)		
Item	Delta Calculation Setting	Symbols and Meanings
Voltage Current	Udiff, Idiff	Calculated differential voltage and current
	3P3W $\rightarrow$ 3V3A	Line voltage and phase current are determined in the calculation for a 3 phase 3 wire connection
	DELTA $\rightarrow$ STAR	Phase voltage and neutral current are determined in the calculation for 3 phase 3 wire (3V3A) connection
	STAR $\rightarrow$ DELTA	Line voltage and neutral current determined in the calculation for a 3 phase 4 wire connection

## Delta Calculation Function (/DT Optional)

Item	Delta Calculation Setting	Symbols and Meanings
Voltage Current	Udiff, Idiff	Calculated differential voltage and current
	3P3W $\rightarrow$ 3V3A	Line voltage and phase current are determined in the calculation for a 3 phase 3 wire connection
	DELTA $\rightarrow$ STAR	Phase voltage and neutral current are determined in the calculation for 3 phase 3 wire (3V3A) connection
	STAR $\rightarrow$ DELTA	Line voltage and neutral current determined in the calculation for a 3 phase 4 wire connection

## Harmonic Measurement Function (/G5 Optional)

Measure source	All Installed Elements		
Method	PLL synchronization		
Frequency range	PLL source of the fundamental frequency is in the range 10 Hz–440 Hz. Select voltage, current, or external clock for each input element.		
PLL source	32 bits Rectangular Set using a line filter (5.5 kHz or 50 kHz)		
Data length for FFT			
Window function			
Anti-aliasing filter			
Sample rate (sampling frequency), window width, and upper limit of analyzed orders for PLL synchronization.			
• During Harmonic Display			
Fundamental Frequency	Sample Rate	Window Width	Upper Limit of Analyzed orders
10Hz to 20Hz	f*3000	3	100
20Hz to 40Hz	f*1500	6	100
40Hz to 55Hz	f*900	10	100
55Hz to 75Hz	f*750	12	100
75Hz to 150Hz	f*450	20	50
150Hz to 440Hz	f*150	75	15

## Accuracy $\pm$ (reading error + measurement range error) (for crest factor 3)

• When Line Filter is ON (5.5 kHz)		
Sampling Frequency	Voltage Current	Power
10Hz $\leq$ f $\leq$ 30Hz	0.25% of reading + 0.3% of range	0.5% of reading + 0.4% of range
30Hz $\leq$ f $\leq$ 66Hz	0.2% of reading + 0.15% of range	0.4% of reading + 0.15% of range
66Hz $\leq$ f $\leq$ 440Hz	0.5% of reading + 0.15% of range	1.2% of reading + 0.15% of range
440Hz $\leq$ f $\leq$ 1kHz	1.2% of reading + 0.15% of range	2% of reading + 0.15% of range
1kHz $\leq$ f $\leq$ 2.5kHz	2.5% of reading + 0.15% of range	6% of reading + 0.2% of range

• Power exceeding 440 Hz is a reference value.  
• During nth order component input, add (n<sup>th</sup> order reading) of (n/(n+1))/50% to the (n+m)<sup>th</sup> order and (n–m)<sup>th</sup> order.  
• Add (n/500)% of reading to n<sup>th</sup> order components

• When Line Filter is ON (50 kHz)		
Sampling Frequency	Voltage Current	Power
10Hz $\leq$ f $\leq$ 30Hz	0.25% of reading + 0.3% of range	0.45% of reading + 0.4% of range
30Hz $\leq$ f $\leq$ 440Hz	0.2% of reading + 0.15% of range	0.4% of reading + 0.15% of range
440Hz $\leq$ f $\leq$ 5.5kHz	1% of reading + 0.15% of range	2% of reading + 0.2% of range
2.5kHz $\leq$ f $\leq$ 5kHz	2% of reading + 0.15% of range	4% of reading + 0.2% of range
5kHz $\leq$ f $\leq$ 7.5kHz	3.5% of reading + 0.15% of range	6.5% of reading + 0.2% of range

• Power exceeding 440 Hz is a reference value.  
• During nth order component input, add (n<sup>th</sup> order reading) of (n/(n+1))/50% to the (n+m)<sup>th</sup> order and (n–m)<sup>th</sup> order.  
• Add (n/500)% of reading to n<sup>th</sup> order components




• When Line Filter is OFF		
Sampling Frequency	Voltage Current	Power
10Hz $\leq$ f $\leq$ 30Hz	0.15% of reading + 0.3% of range	0.25% of reading + 0.4% of range
30Hz $\leq$ f $\leq$ 440Hz	0.1% of reading + 0.15% of range	0.2% of reading + 0.15% of range
440Hz $\leq$ f $\leq$ 2.5kHz	0.6% of reading + 0.15% of range	1.2% of reading + 0.2% of range
2.5kHz $\leq$ f $\leq$ 5kHz	1.6% of reading + 0.15% of range	3.2% of reading + 0.2% of range
5kHz $\leq$ f $\leq$ 7.5kHz	2.5% of reading + 0.15% of range	5% of reading + 0.2% of range

• Power exceeding 440 Hz is a reference value.  
• During nth order component input, add (n<sup>th</sup> order reading) of (n/(n+1))/50% to the (n+m)<sup>th</sup> order and (n–m)<sup>th</sup> order.  
• Add (n/500)% of reading to n<sup>th</sup> order components

## D/A Output (/DA Optional)

D/A conversion resolution	16 bits
Output voltage	$\pm 5$ V FS (max. approximately $\pm 7.5$ V) for each rated value
Update rate	Same as the data update rate on the main unit.
Number of outputs	20 channels (each channel can be set separately)
Accuracy	$\pm$ (accuracy of a given measurement function + 0.1% of FS) FS = 5V
D/A zoom	Setting maximum and minimum values.
Minimum load	100 k $\Omega$
Temperature coefficient	$\pm 0.05\%$ of FS/ $^\circ\text{C}$
Remote control	EXT START, EXT STOP, EXT RESET, EXT HOLD, EXT SINGLE and EXT PRINT (all input signal) / INTEG BUSY (output signal) Requires /DA option

## Frequency Simplified Figure Below

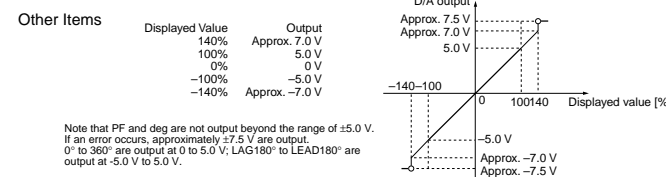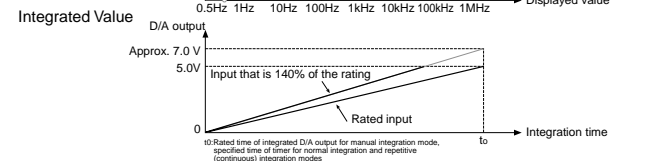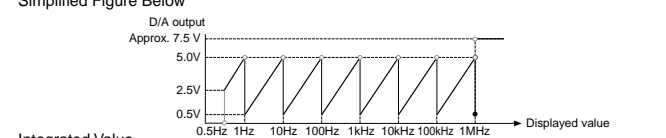

Note that PF and deg are not output beyond the range of  $\pm 5.0$  V.  
If an error occurs, approximately  $\pm 7.5$  V are output.  
0 $^\circ$  to 360 $^\circ$  are output at 0 to 5.0 V; LAG180 $^\circ$  to LEAD180 $^\circ$  are output at -5.0 V to 5.0 V.

## Built-in Printer (B5 Optional)

Printing method	Thermal line-dot
Dot density	8 dots/mm
Paper width	112 mm
Effective recording width	104 mm
Recorded information	Screenshots, list of measured values, harmonic bar graph printouts, settings
Auto print function	Measured values are printed out automatically. However, auto print function can't use in combination with store function.

## Serial (RS-232) Interface (C2 Optional) \* Select USBport (PC) or RS-232

Connector type	9-pin D-Sub (plug)
Electrical specifications	Conforms with EIA-574 (EIA-232 (RS-232) standard for 9-pin)
Connection type	Point-to-point
Communication mode	Full duplex
Synchronization method	Start-stop synchronization
Baud rate	Select from the following. 1200,2400,4800,9600,19200 bps

## RGB Video Signal (VGA) Output Section (V1 Optional)

Connector type	15-pin D-Sub (receptacle)
Output format	VGA compatible

## Ethernet Communications (C7 Optional)

Number of communication ports	1
Connector type	RJ-45 connector
Electrical and mechanical specifications	Conforms to IEEE 802.3
Transmission system	Ethernet 100BASE-TX/10BASE-T
Transmission rate	10 Mbps/100Mbps
Protocol	TCP/IP
Supported Services	FTP server,FTP client (network drive),LPR client (network printer), SMTP client (mail transmission), Web server, DHCP, DNS, Remote control
Connector Type	RJ-45connector

## USB port(PC) (C12 Optional) \* Select USBport (PC) or RS-232

Connector	Type B connector (receptacle)
Electrical and Mechanical Specifications	Conforms to USB Rev.1.1
Speed	Max. 12 Mbps
Number of Ports	1
Supported service	Remote control
Supported Systems	Models with standard USB ports that run Windows 98 SE, Windows Me, Windows 2000, or Windows XP with USB port as a standard. (A separate device driver is required for connecting to a PC.)

## USB port(Peripheral) (C5 Optional)

Connector	Type A connector (receptacle)
Electrical and Mechanical Specifications	Conforms to USB Rev.1.1
Speed	Max. 12 Mbps
Number of Ports	2
Supported keyboards	104 keyboard (US) and 109 keyboard (Japanese) conforming to USB HID Class Ver.1.1devices
Supported USB memory devices	USB (USB memory) flash memory
Power supply	5 V, 500 mA (per port) However, device whose maximum current consumption exceeds 100 mA cannot be connected simultaneously to the two ports.

## External I/O

**I/O Section for Master/Slave Synchronization Signals**  
Connector type BNC connector: Both slave and master

**External Clock Input Section**  
Connector type BNC connector  
Input level TTL  
Inputting the synchronization source as the Ext Clk of normal measurement.  
Frequency range Same as the measurement range for frequency measurement.  
Input waveform 50% duty ratio square wave  
Inputting the PLL source as the Ext Clk of harmonic measurement.  
Frequency range 10 Hz to 2.5 kHz  
Input waveform 50% duty ratio square wave

**For Triggers**  
Minimum pulse width 1 μs  
Trigger delay time Within (1 μs + 1 sample rate)

**PC Card Interface** TYPE II (Flash ATA card)

**GP-IB Interface** Use one of the following by NATIONAL INSTRUMENTS:  
• AT-GPIB  
• PCI-GPIB and PCI-GPIB+  
• PCMCIA-GPIB and PCMCIA-GPIB+  
Use driver NI-488.2M version 1.60 or later.  
Conforms electrically and mechanically to IEEE Std 488-1978 (JIS C 1901-1987).  
Functional specification SH1, AH1, T6, L4, SR1, RL1, PP0, DC1, DT1, and C0.  
Conforms to protocol IEEE Std 488.2-1987.  
ISO (ASCII)  
Encoding Addressable mode  
Mode 0-30  
Address Remote mode can be cleared using the LOCAL key (except during Local Lockout).  
Clear remote mode

## General Specifications

Warm-up time	Approximately thirty minutes.
Operating temperature:	5-40°C
Operating humidity:	20-80% (when printer not used), 35 to 80% RH (when printer is used) (No condensation may be present)
Operating altitude	2000 m or less
Storage environment:	-25-60°C (no condensation may be present)
Storage humidity:	20 to 80% RH (no condensation)
Rated supply voltage	100-240 VAC
Allowed supply voltage fluctuation range	90-264 VAC
Rated supply frequency	50/60 Hz
Allowed supply frequency fluctuation	48 to 63 Hz
Maximum power consumption	150 VA (when using built-in printer)
Weight	Approximately 15 kg (including main unit, 4 input elements, and options)
Battery backup	Setup information and internal clock are backed up with the lithium battery

# DESCRIPTION

## Automatically select the appropriate calculation for each data updating period

AC signals have waveforms that fluctuate repeatedly when viewed instantaneously. Therefore, measuring the power values of AC signals requires averaging for each period in a repeated interval, or averaging the data of several periods using a filtering process. The WT3000 automatically selects the appropriate calculation method (one of the above two methods) based on the data updating period. This approach ensures fast response and high stability as suitable for the particular measurement objective.

• **When the data updating period is 50ms, 100ms, 5s, 10s, or 20s**  
Measurement values are determined by applying an Average for the Synchronous Source Period (ASSP) calculation to the sample data within the data updating period. (Note that this excludes power integrated values WP, as well as current integrated value q in DC mode). With ASSP, a frequency measurement circuit is used to detect the input signal period set as the synchronous source. Sample data corresponding to an interval which is an integer multiple of the input period are used to perform the calculation. Based on its fundamental principles, the ASSP method allows measurement values to be obtained simply by averaging an interval corresponding to a single period, so it is useful in cases where the

data updating period is short or when measuring the efficiency of low-frequency signals. This method will not provide correct measurement values unless the period of the set synchronous source signal is accurately sensed. Therefore, it is necessary to check whether the frequency of the synchronous source signal has been accurately measured and displayed. See the user's manual for notes on the synchronous source signal and frequency filter settings.

• **When the data updating period is 250ms, 500ms, 1s, or 2s**  
Measurement values are determined by applying an Exponential Average for Measuring Period (EAMP) calculation to the sample data within the data updating period. With EAMP, the sample data are averaged by applying a digital filtering process. This method does not require accurate detection of the input period. EAMP provides excellent measurement value stability.

\* See page 12 of the specifications for information on the relationship between the data updating period and the lowest measurement frequency.

## Selecting formulas for calculating apparent power and reactive power

There are several types of power—active power, reactive power, and apparent power. Generally, the following equations are satisfied:  
Active power  $P = UI \cos \theta$  (1)  
Reactive power  $Q = UI \sin \theta$  (2)  
Apparent power  $S = UI$  (3)  
In addition, these power values are related to each other as follows:  
(Apparent power  $S$ )<sup>2</sup> = (Active power  $P$ )<sup>2</sup> + (Reactive power  $Q$ )<sup>2</sup> (4)

U: Voltage RMS  
I: Current RMS  
θ: Phase between current and voltage  
Three-phase power is the sum of the power values in the individual phases.

These defining equations are only valid for sinewaves. In recent years, there has been an increase in measurements of distorted waveforms, and users are measuring sinewave signals less frequently. Distorted waveform measurements provide different measurement values for apparent power and reactive power depending on which of the above defining equations is selected. In addition, because there is no defining equation for power in a distorted wave, it is not necessarily clear which equation is correct. Therefore, three different formulas for calculating apparent power and reactive power are provided with the WT3000.

• **TYPE1 (method used in normal mode with older WT Series models)**  
With this method, the apparent power for each phase is calculated from equation (3), and reactive power for each phase is calculated from equation (2). Next, the results are added to calculate the power.  
Active power for three-phase four-wire connection:  $P_{\Sigma} = P1 + P2 + P3$   
Apparent power for three-phase four-wire connection:  $S_{\Sigma} = S1 + S2 + S3 = U1 \times I1 + U2 \times I2 + U3 \times I3$   
Reactive power for three-phase four-wire connection:  $Q_{\Sigma} = Q1 + Q2 + Q3$   
( $= \sqrt{U1 \times I1^2 - P1^2} + \sqrt{U2 \times I2^2 - P2^2} + \sqrt{U3 \times I3^2 - P3^2}$ )  
\*S1, S2, and S3 are calculated with a positive sign for the leading phase and a negative sign for the lagging phase.

• **TYPE2**  
The apparent power for each phase is calculated from equation (3), and the results are added together to calculate the three-phase apparent power (same as in TYPE1). Three-phase reactive power is calculated from three-phase apparent power and three-phase active power using equation (4).  
Active power for three-phase four-wire connection:  $P_{\Sigma} = P1 + P2 + P3$   
Apparent power for three-phase four-wire connection:  $S_{\Sigma} = S1 + S2 + S3 = U1 \times I1 + U2 \times I2 + U3 \times I3$   
Reactive power for three-phase four-wire connection:  $Q_{\Sigma} = \sqrt{S_{\Sigma}^2 - P_{\Sigma}^2}$

• **TYPE3 (method used in harmonic measurement mode with WT1600 and PZ4000)**  
This is the only method in which the reactive power for each phase is directly calculated using equation (2). Three-phase apparent power is calculated from equation (4).  
Active power for three-phase four-wire connection:  $P_{\Sigma} = P1 + P2 + P3$   
Apparent power for three-phase four-wire connection:  $S_{\Sigma} = \sqrt{P_{\Sigma}^2 + Q_{\Sigma}^2}$   
Reactive power for three-phase four-wire connection:  $Q_{\Sigma} = Q1 + Q2 + Q3$

# Accessories

## Instrument Carts.



**701960**  
**Compact Instrument Cart**  
500 × 560 × 705 mm (WDH)  
/A: Keyboard and mouse mount

Top shelf	Equipment not exceeding 450 (W) × 450 (D) × 300 (H) mm
Middle shelf	Equipment not exceeding 450 (W) × 450 (D) × 300 (H) mm
Bottom shelf	Equipment not exceeding 450 (W) × 450 (D) × 240 (H) mm


\* W: Width D: Depth H: Height  
Maximum load: 20 kg on each shelf



**701961**  
**Deluxe Instrument Cart**  
570 × 580 × 839 mm (WDH)  
/A: Keyboard and mouse mount

Top shelf	Equipment not exceeding 450 (W) × 450 (D) × 400 (H) mm
Bottom shelf	Equipment not exceeding 450 (W) × 450 (D) × 400 (H) mm

\* W: Width D: Depth H: Height  
Maximum load: 50 kg on each shelf  
\*The photo shows the mount holding a DL7400.

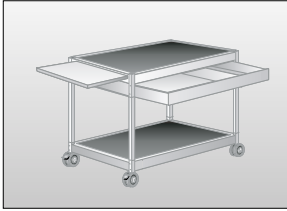

**701962**  
**All-purpose Instrument Cart**  
467 × 693 × 713 mm (WDH)

Top shelf	Equipment not exceeding 457 (W) × 683 (D) mm
Drawer	Equipment not exceeding 610 (W) × 380 (D) mm
Slide table	Equipment not exceeding 380 (W) × 440 (D) mm

\* W: Width D: Depth  
Maximum load: 50 kg on each shelf

## External dimensions of Yokogawa power meters (excluding protrusions)

	Width (mm)	Height (mm)	Depth (mm)	Compact mount 701960	Deluxe mount 701961	General-purpose mount 701962
WT3000	426	177	450	✓	✓	✓
WT1600	426	177	400	✓	✓	✓
WT210	213	88	379	✓	✓	✓
WT230	213	132	379	✓	✓	✓
PZ4000	426	177	450	✓ <sup>1</sup>	✓ <sup>1</sup>	✓ <sup>1</sup>

<sup>1</sup>The back-side inputs protrude beyond the back shelves of the mounts.

\* These mount do not conform to CE marking.

## WT Series & PZ



### WT1600

This model has a wide range of display capabilities, including waveforms and vectors, and features suitable for a wide variety of applications.



### WT210

The WT210 is a low-priced model which can independently measure standby power consumption and rated power.



### PZ4000 Power Analyzer

This analyzer has wide frequency range and waveform analysis functions.



### WT230

The WT230 is a small three-phase model with an optional harmonic measurement function.

\* See the individual product catalogs for details.

## Model and Suffix Codes

### Precision Power Analyzer WT3000

Model	Suffix Codes	Description
760301		WT3000 1 input element model
760302		WT3000 2 input elements model
760303		WT3000 3 input elements model
760304		WT3000 4 input elements model
Element number	-01	Select when you selected 760301 model
	-02	Select when you selected 760302 model
	-03	Select when you selected 760303 model
	-04	Select when you selected 760304 model
Version	-SV	Standard Version
	-MV	Motor Version
Power cord	-D	UL/CSA standard
	-F	VDE standard
	-R	AS standard
	-Q	BS standard
	-H	GB standard
		-H
Options	/G5	Harmonic Measurement
	/B5	Built-in Printer
	/DT	Delta Calculation
	/FQ	Add-on Frequency Measurement
	/DA	20ch D/A output
	/V1	VGA Output
	/C2	Select Serial (RS-232) Interface
	/C12	one USB port (PC)
	/C5	USB port (Peripheral)
	/C7	Ethernet function

Note: Adding input modules after initial product delivery will require rework at the factory. Please choose your models and configurations carefully, and inquire with your sales representative if you have any questions.

### Standard accessories

Power cord, Spare power fuse, Rubber feet, current input protective cover, User's manual, expanded user's manual, communication interface user's manual, printer roll paper (provided only with /B5), connector (provided only with /DA) Safety terminal adapter 758931 (provided two adapters in a set times input element number)

\* Cable B9284LK (light blue) for external current sensor input is sold separately. Safety terminal adapter 758931 is included with the WT3000. Other cables and adapters must be purchased by the user.

Safety terminal adapter  
758931



### Rack Mount

Model	Product	Description
751535-E4	Rack mounting kit	For EIA
751535-J4	Rack mounting kit	For JIS

### Accessory (sold separately)

Model/parts number	Product	Description	Order Q'ty
758917	Test read set	A set of 0.8m long, red and black test leads	1
758922	Small alligator-clip	Rated at 300V and used in a pair	1
758929	Large alligator-clip	Rated at 1000V and used in a pair	1
758923	Safety terminal adapter	(spring-hold type) Two adapters to a set.	1
758931	Safety terminal adapter	(screw-fastened type) Two adapters to a set. 1.5 mm hex Wrench is attached	1
758924	Conversion adapter	BNC-banana-jack(female) adapter	1
366924	BNC-BNC cable	1m	1
366925	BNC-BNC cable	2m	1
758921	Fork terminal adapter	Banana-fork adapter. Two adapters to a set	1
B9284LK	External sensor cable	Current sensor input connector. Length 0.5m	1
B9316FX	Printer roll paper	Thermal paper, 10 meters (1 roll)	10

▲ Due to the nature of this product, it is possible to touch its metal parts. Therefore, there is a risk of electric shock, so the product must be used with caution.

\* Use these products with low-voltage circuits (42V or less).

### Application Software

Model	Product	Description	Order Q'ty
760122	WTViewer	Data acquisition software	1

### Mounts

Model	Suffix and codes	Description	Description
701960		Compact mount	500*560*705mm(W, D, H)
	/A		Key board and mouse table
701961		Deluxe mount	570*580*839mm(W, D, H)
	/A		Key board and mouse table
701962		General-purpose mount	467*693*713mm(W, H, D)

### Current Sensor Unit

Model	Suffix code	Description
751521		Single-phase
751523	-10	Three-phase U, V
	-20	Three-phase U, W
	-30	Three-phase U, V, W
Supply voltage	-1	100 V AC (50/60 Hz)
	-3	115 V AC (50/60 Hz)
	-7	230 V AC (50/60 Hz)
Power card	-D	UL/CSA standard
	-F	VDE standard
	-R	SAA standard
	-J	BS standard
	-H	GB standard

\* 751523-10 is designed for WT3000, PZ4000 and WT1600. 751523-20 is designed for the WT2000, and WT200 Series.

\* 751521/751523 do not conform to CE Marking.


### Clamp on Probe / Current transducer

Model	Product	Description
751552	Clamp-on probe	30 Hz to 5 kHz, 1400Apk (1000Arms)
751574	Current transducer	DC to 100 kHz (-3dB), 600Apk

\* For detailed information, see Power Meter Accessory Catalog Bulletin 7515-52E

\* 96001 is a Yokogawa M&C product.

## Exterior

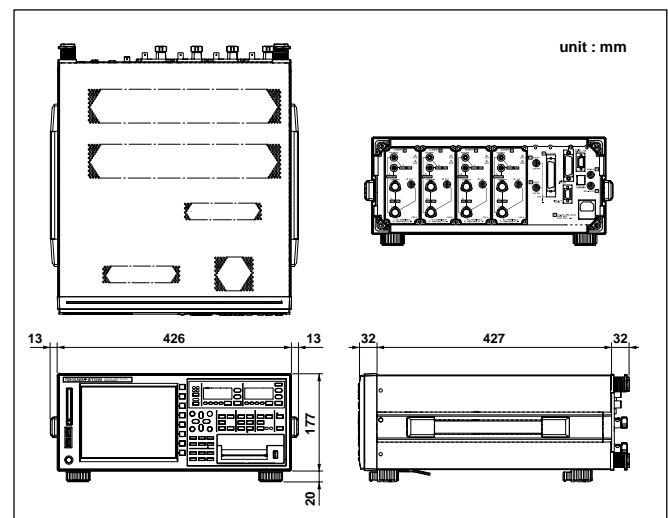

# YOKOGAWA

YOKOGAWA ELECTRIC CORPORATION

Communication & Measurement Business Headquarters /Phone: (81)-422-52-6768, Fax: (81)-422-52-6624

E-mail: tm@csv.yokogawa.co.jp

YOKOGAWA CORPORATION OF AMERICA

Phone: (1)-301-916-0409, Fax: (1)-301-916-1498

YOKOGAWA EUROPE B.V.

Phone: (31)-33-4641858, Fax: (31)-33-4641859

YOKOGAWA ENGINEERING ASIA PTE. LTD.

Phone: (65)-62419933, Fax: (65)-62412606

Subject to change without notice.

[Ed : 02/b] Copyright ©2004

Printed in Japan, 507(KP)

MS-14E